


DC71263 Assembly Manual Dining Chair

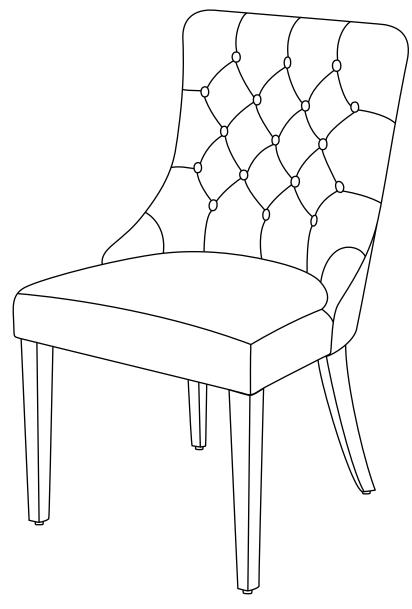



A CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.




A x 2	B x 2	C x 1
	0 0	
Front Legs	Rear Legs	
H1 x 8	H2 x 8	H3 x 8
M8 x 60 mm		
H4 x 1		

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.




ASSEMBLY INSTRUCTIONS

1 Unzip the bottom of the seat to take out the legs and hardware.

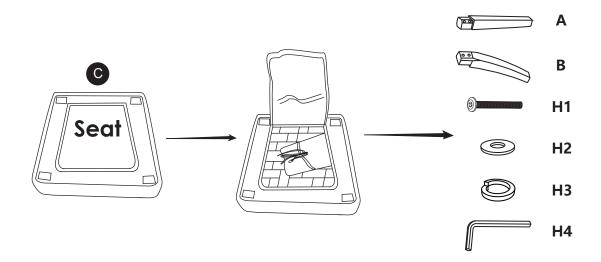


2 Attach front legs (A) and rear legs (B) to seat (C), using allen bolts (H1), spring washers (H3), flat washers (H2), and allen wrench (H4).

Note: Do not fully tighten yet.

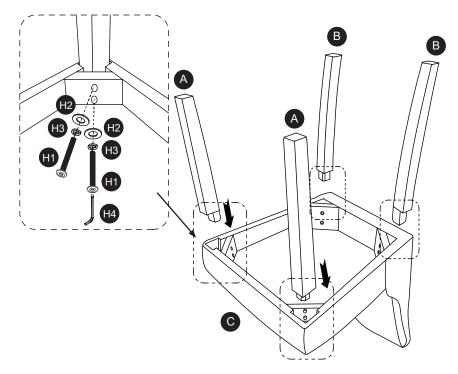




3 Turn assembled chair upright and place on a flat surface. Press down firmly to make sure all four feet are level with the floor. Once level, tighten all bolts.

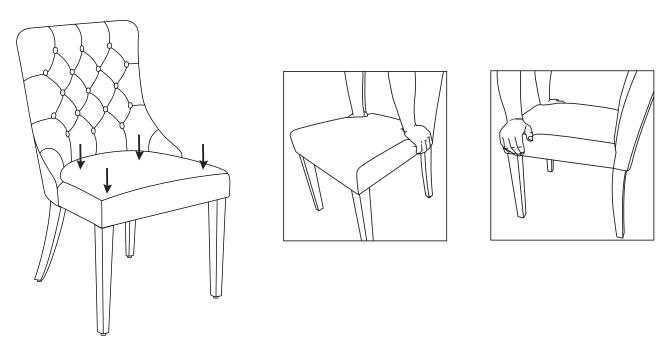

4 Assembly complete. Enjoy.

Note: Each leg has an adjustable foot leveler to help level your chair.

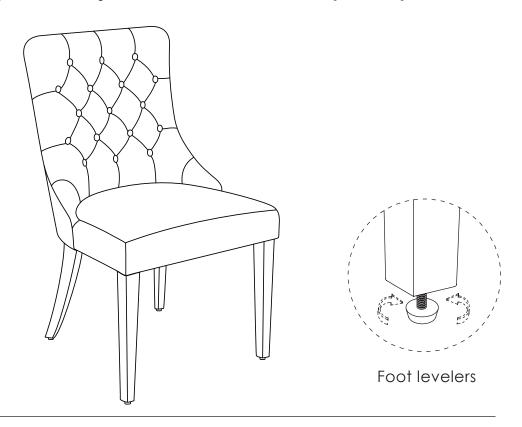



PRODUCT WARRANTY

- · 1-year limited on cover.
- · 1-year limited on frame construction.
- · 1-year limited on cushioning material.

CARE & MAINTENANCE

Water Based Cleaner 'W': Spot clean using the foam only from a water-based cleaning agent such as a mild detergent or non-solvent upholstery shampoo product. Apply foam with a soft in circular motion. Vaccum when dry.

Do not place furniture in direct sunlight and keep furniture at least 60 cm / 2 feet from heat sources to avoid fading.

Follow Us









If at any step you need a helping hand, we're always here for you. You can email us, or hop into a live chat on our website - whatever method is convenient for you.



support@chitaliving.com