

DC72014 Assembly Manual Dining Chair

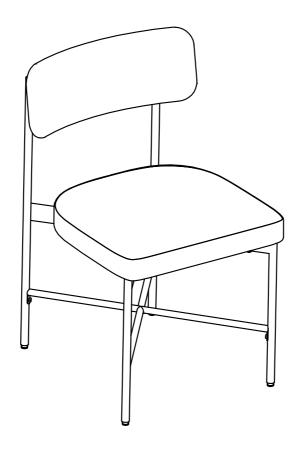

A CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

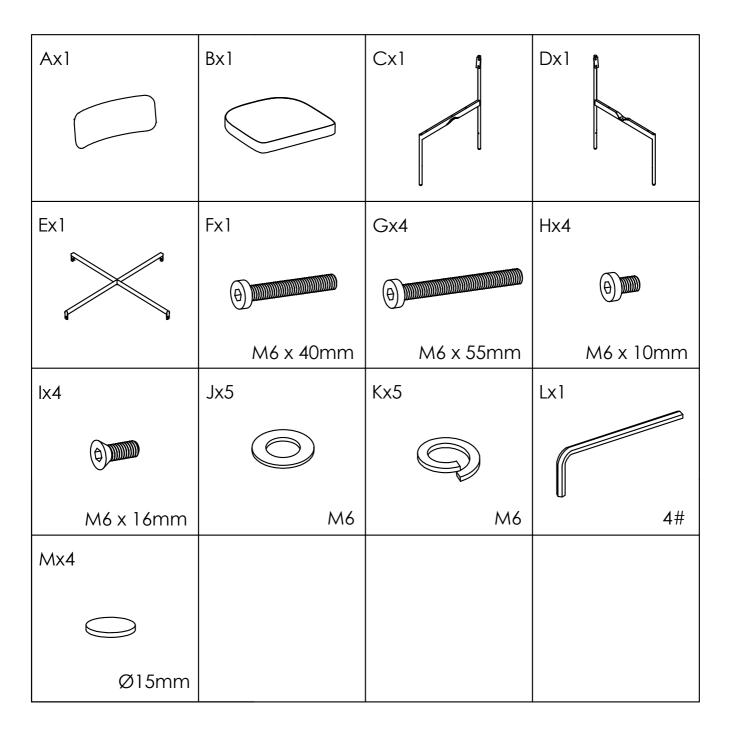


Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Note: Do NOT use power tools for assembly.


ASSEMBLY INSTRUCTIONS

1 Attach leg (C) to leg (D), using bolt (F), lock washer (K), flat washer (J) and allen wrench (L). Do NOT fully tighten yet.


Note: The directions of metal clips should be the same as indicated below.

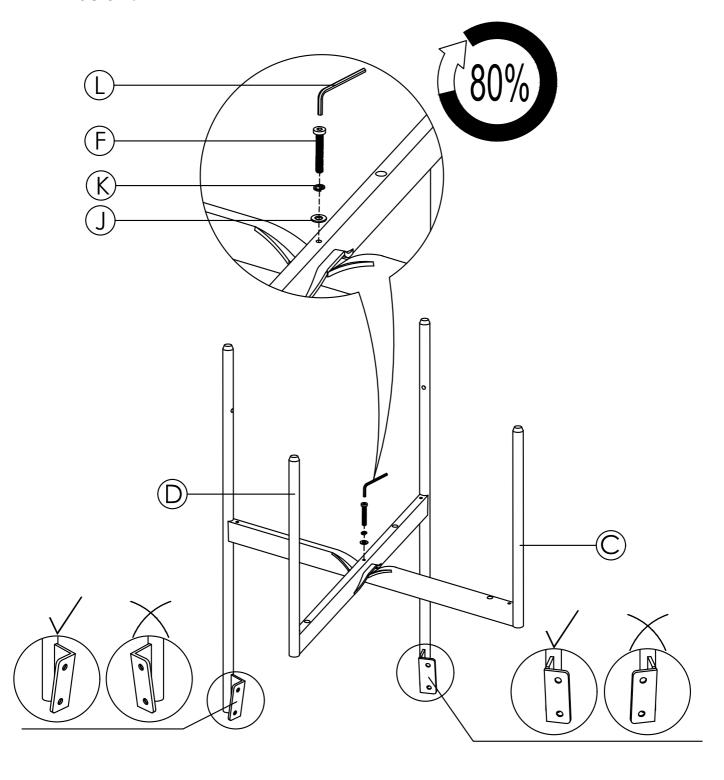


Attach X-shaped frame (E) to assembled legs in step 1, using bolts (H) and allen wrench (L). Note: The arrow should face the front side of the chair. Loosely attach bolts (H) one by one. After all 4 bolts are attached, fully tighten all bolts. Then, fully tighten bolt (F) in step 1.

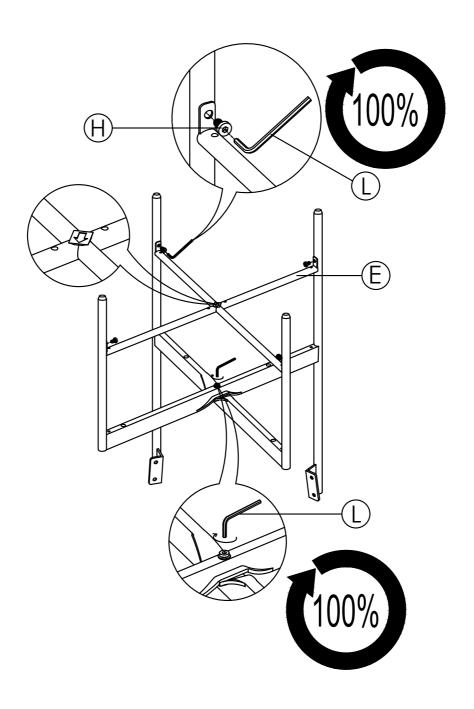


3 Attach backrest (A) to assembled chair frame in step 2, using bolts (I) and allen wrench (L). **Tighten all bolts**.

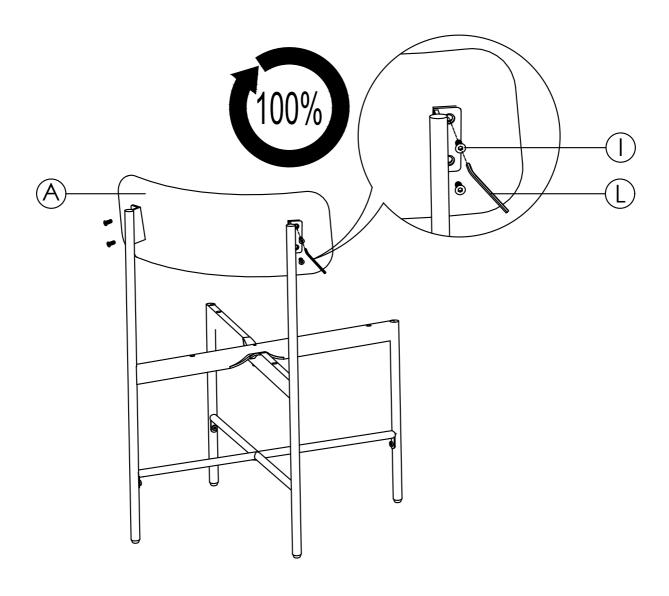

4 Attach assembled chair frame in step 3 to seat (B), using bolts (G), lock washers (K), flat washers (J) and allen wrench (L). Tighten all bolts.

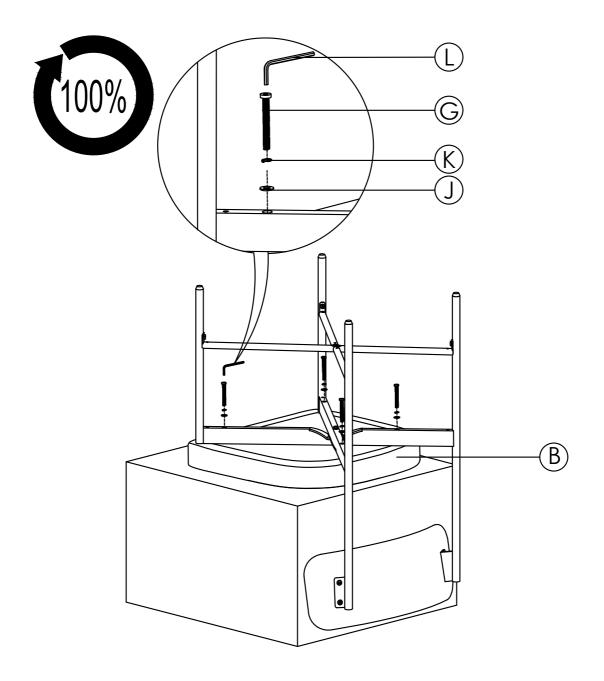


5 Complimentary felt pads (M) are included to help protect your floor or make the chair slide easier.

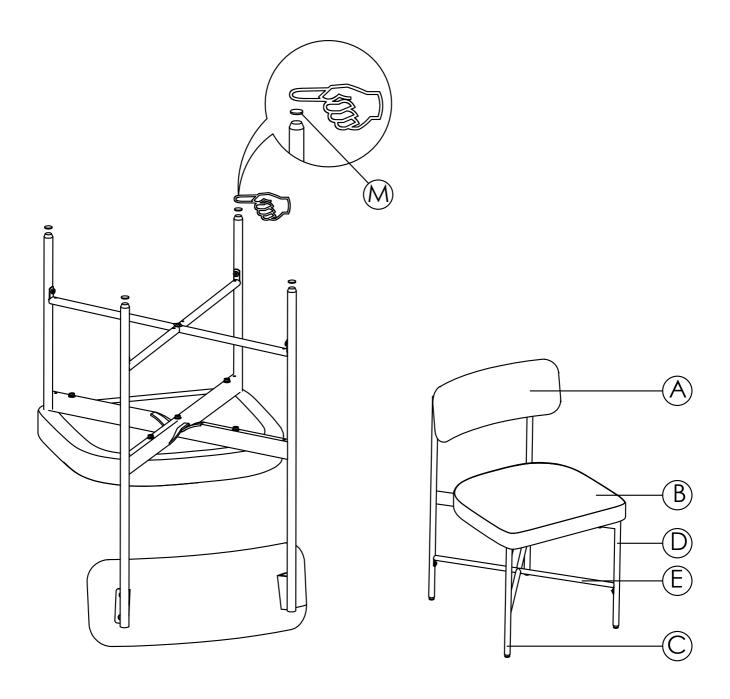

Turn assembled chair upright and place on a flat surface.

Note: Each leg has an adjustable foot leveler to help level your chair.

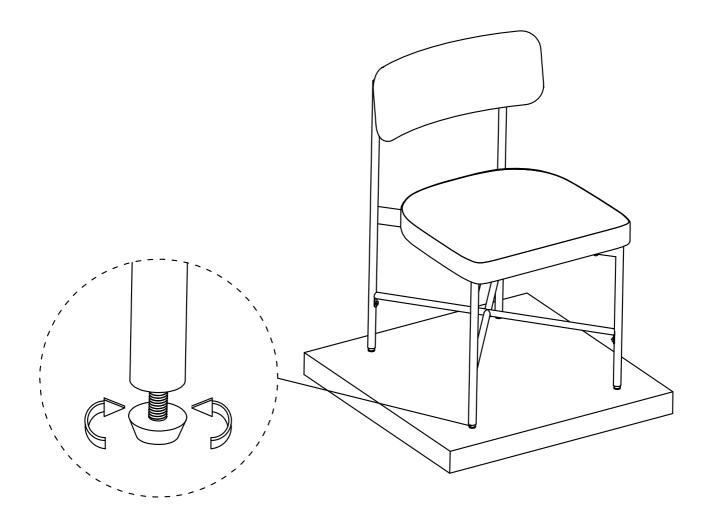



7 Assembly complete. Enjoy.

