DC72017 Assembly Manual

Swivel Dining Chair





THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Assembly Manual DC72017



Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Make sure all parts and hardware are present before assembly.

Note: Do NOT use power tools for assembly.

ASSEMBLY INSTRUCTIONS

Note: Assemble on a soft and smooth surface to prevent damage to product finish. Do not overtighten bolts to avoid stripping.



Connect Leg (C) and Leg (D) together Attach Footrest (E) to chair base, using Bolts (M) and Allen Wrench (H).

Note: Do not fully tighten bolts.



2 Attach Swivel Plate (G) to assembled chair base in Step 1, using Bolts (M). After all 4 bolts are attached, use Allen Wrench (H) to tighten.



- Attach Wood Back Panel (B)to metal back bracket , using Bolts (N).
 After all 4 bolts are attached, use Allen Wrench (H) to tighten.
 Note:
 - 1. Please pay attention to the direction of the Wood Back Panel (B).
 - 2. Do not fully tighten bolts.



Attach Metal Back Bracket (A) to Seat (F), using Bolts (O), Flat Washers (K), Spring Washers (J), Nuts (L), Allen Wrench (H), and Open-Ended Wrench (I).

Note: Do not fully tighten bolts.

Please pay attention to the direction of the Nuts (L).



5 Attach assembled chair base in Step 2 to assembled seat in Step 4, using Bolts (M). After all 4 bolts are attached, use Allen Wrench (H) to tighten.





6 Put assembled chair on a flat surface. Push legs up or down as necessary to level. Once level, tighten all bolts. Note: Each leg has an adjustable foot leveler to help level your chair.



7 Complimentary Felt Pads (P) are incuded to help protect your floor or make the chair slide easier. If needed, attach the complimentary Felt Pads (P) to the leg.







8 Assembly complete. Enjoy.

