


BS71232 Assembly Manual



 
Dining Chair

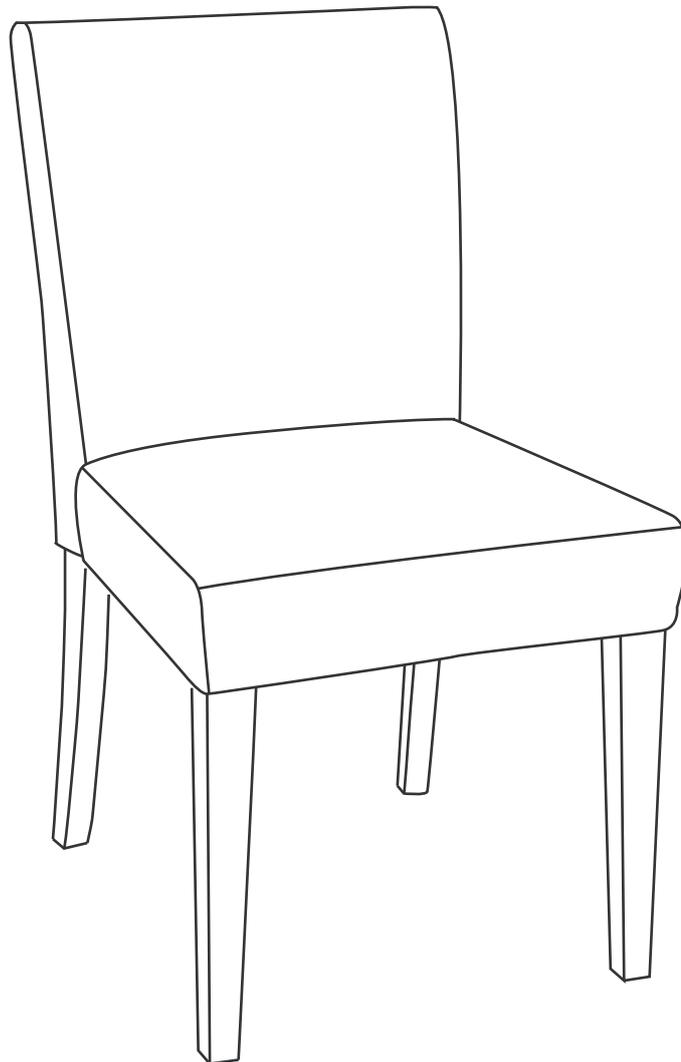

▲ CAUTION


THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

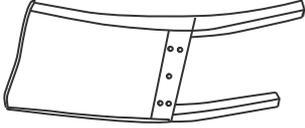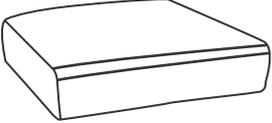PART	DRAWING	DESCRIPTION	QTY
A		Back	1
B		Seat	1
C		Front Legs	2
H1		Bolt A (M8 X 70mm)	4
H2		Bolt B (M8 X 80mm)	4
H3		Bolt C (M8 X 60mm)	1
H4		Flat Washer	9
H5		Lock Washer	9
H6		Allen Key	1


ASSEMBLY INSTRUCTIONS

- 1 Remove the hardware package and the front legs from the underneath pocket of the upholstered seat.

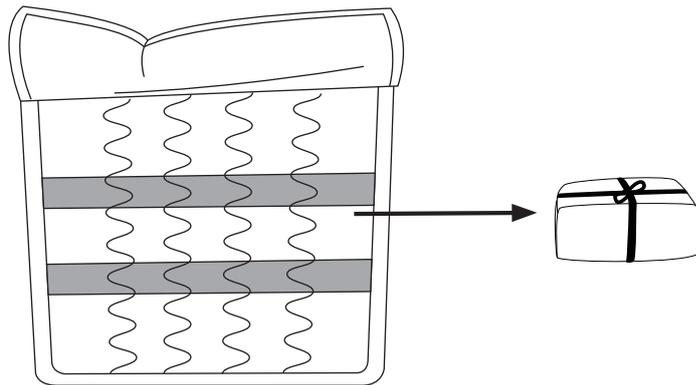

- 2 Attach seat (B) to back (A), using bolt A (H2), bolt B (H3), lock washers (H5), flat washers (H4), and allen wrench (H6).


Note: Two different sizes of bolts are required for this step.

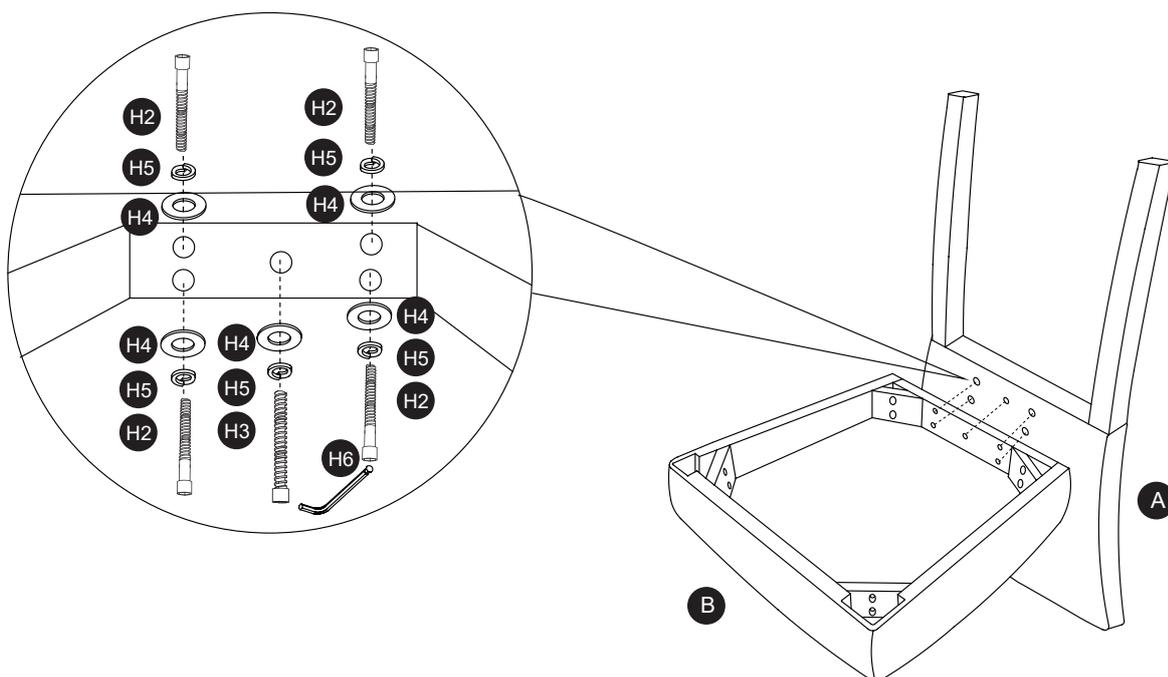



ASSEMBLY INSTRUCTIONS

- 3 Attach front legs (C) to seat (B), using bolts (H1), lock washers (H5), flat washers (H4), and allen wrench (H6).


Note: Do not fully tighten yet.

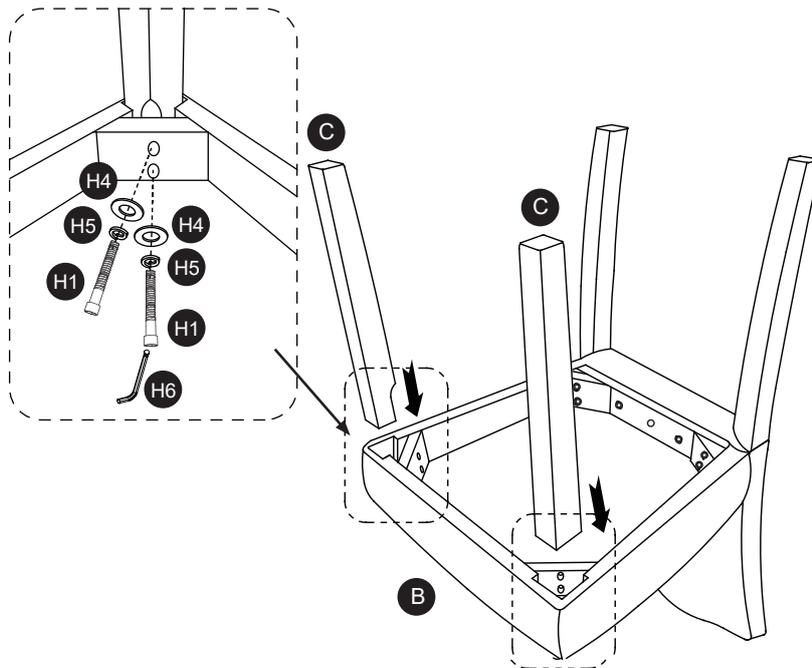

- 4 Turn assembled chair upright and place on a flat surface. Press down firmly to make sure all four feet are level with the floor. **Once level, tighten all bolts.**

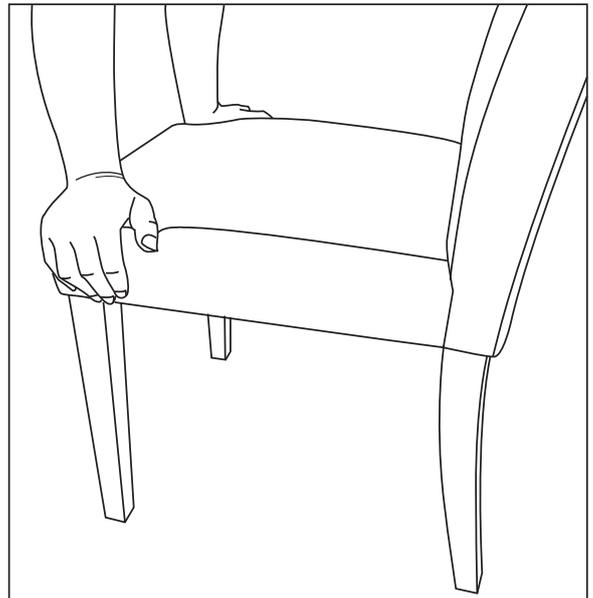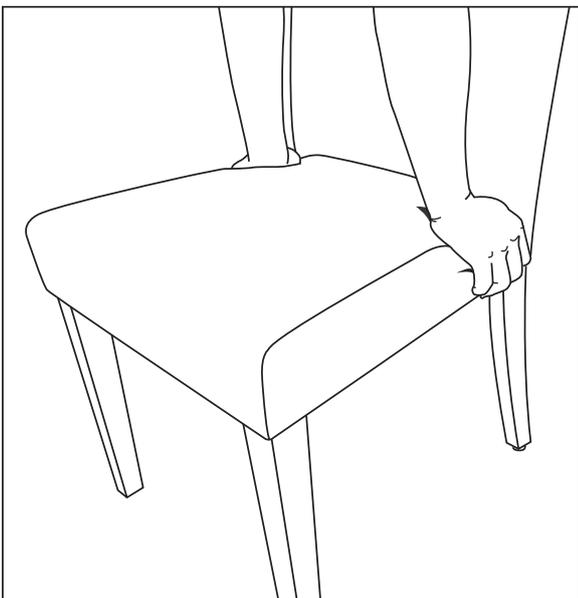

- 5** Attach the dust cover to the seat.

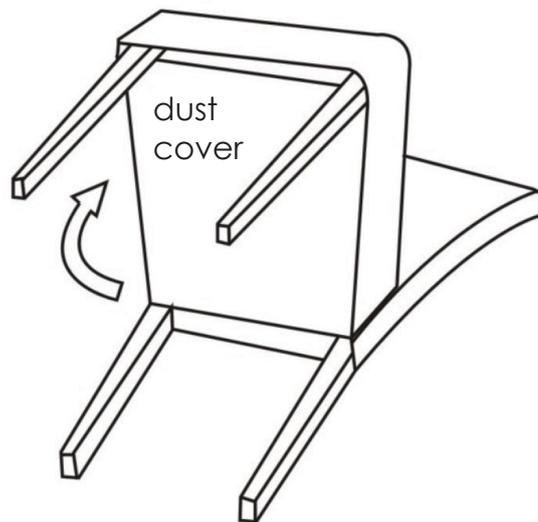

- 6** Assembly complete. Enjoy.

