


DC71266 Assembly Manual Dining Chair

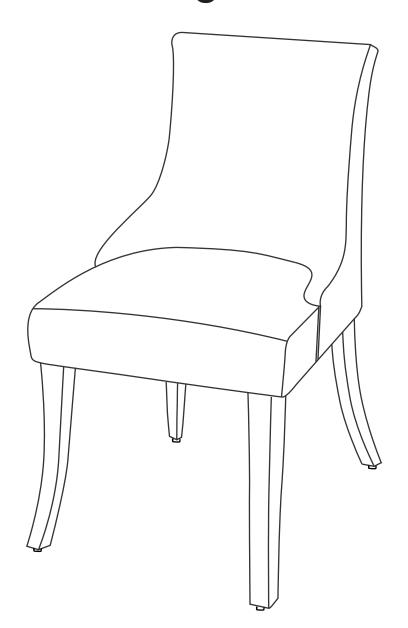



A CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.




A x 2	B x 2	C x 1
0.0		
Front Legs	Rear Legs	
H1 x 8	H2 x 8	H3 x 8
M8 x 60 mm		
H4 x 1		

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.




ASSEMBLY INSTRUCTIONS

1 Unzip the bottom of the seat to take out the legs and hardware.

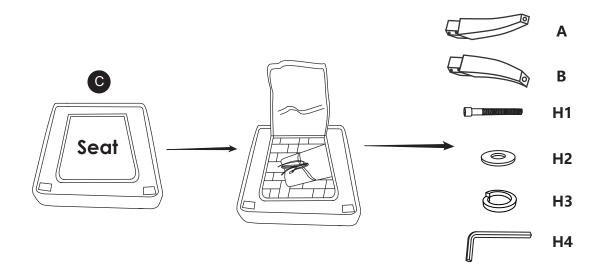


Attach front legs (A) and rear legs (B) to seat (C), using long bolts (H1), lock washers (H3), flat washers (H2), and allen wrench (H4).

Note: Do not fully tighten yet.

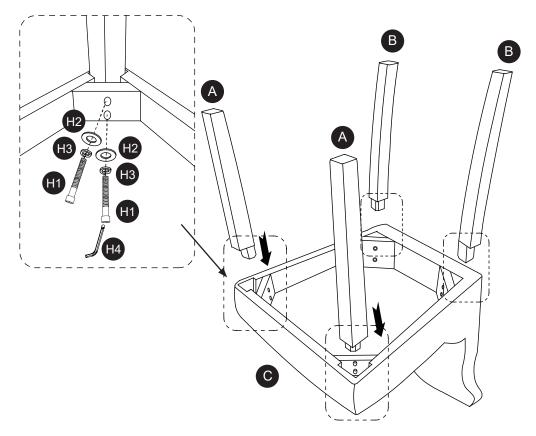




3 Turn assembled chair upright and place on a flat surface. Press down firmly to make sure all four feet are level with the floor. Once level, tighten all bolts.

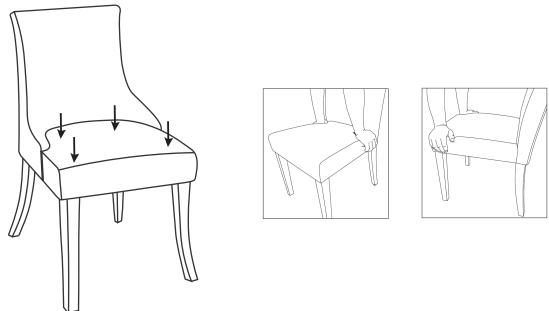

4 Assembly complete. Enjoy.

Note: Each leg has an adjustable foot leveler to help level your chair.

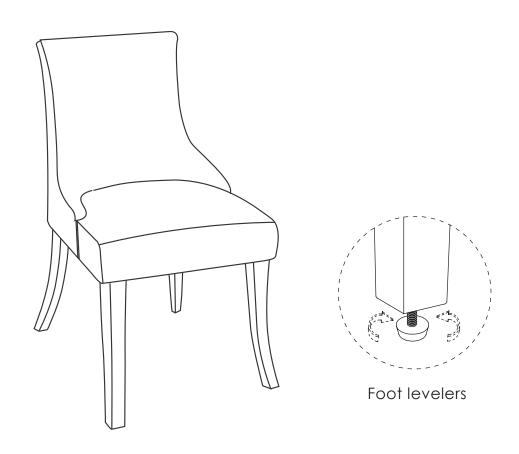



PRODUCT WARRANTY

- · 1-year limited on cover.
- · 1-year limited on frame construction.
- · 1-year limited on cushioning material.

CARE & MAINTENANCE

Water Based Cleaner 'W': Spot clean using the foam only from a water-based cleaning agent such as a mild detergent or non-solvent upholstery shampoo product. Apply foam with a soft in circular motion. Vaccum when dry.

Do not place furniture in direct sunlight and keep furniture at least 60 cm / 2 feet from heat sources to avoid fading.

CONTACT US



CHITA CONSUMER CARE

All of us at CHITA thank you for being a valued customer. If you have any questions or concerns, please contact CHITA consumer care. We will respond within 24 business hours.

Email:contactus@chitaliving.com





CHITA FEEDBACK

Your feedback is very important to our company as we constantly strive to improve our products and services.

If possible, CHITA would sincerely appreciate if you can provide an honest review on our product and shopping experience.