## **AC7001 Assembly Manual**


**Accent Chair** 





## **▲** CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

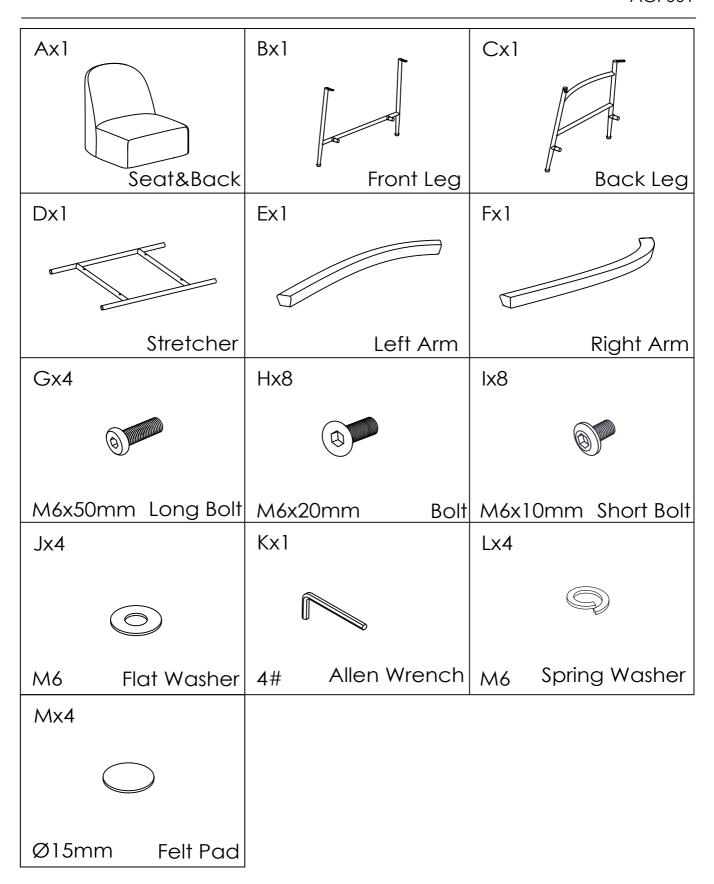


Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


Note: Do NOT use power tools for assembly.

## **ASSEMBLY INSTRUCTIONS**


Attach the Stretcher (D) to the Back Leg (C), using Short Bolts (I) and Allen Wrench (K). **Do not fully tighten.** 

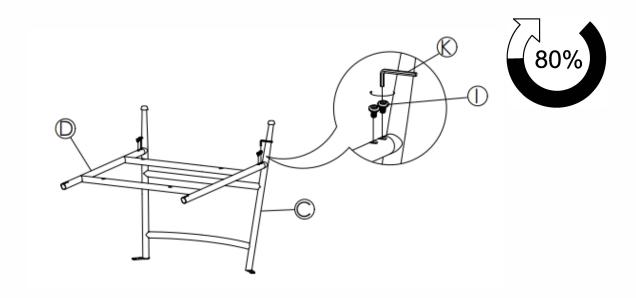


Attach the Front Leg (B) to the Stretcher (D), using Short Bolts (I) and Allen Wrench (K). **Do not fully tighten.** 

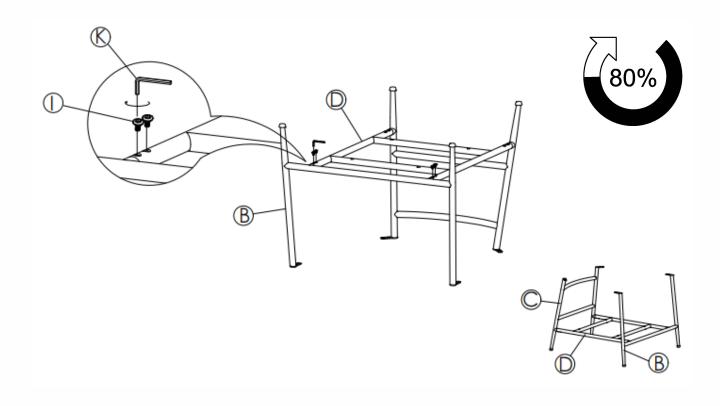


3 Attach the Left Arm (E) and Right Arm (F) to the assembled chair frame in Step 2, using Bolts (H) and Allen Wrench (K). **Do not fully tighten.** 

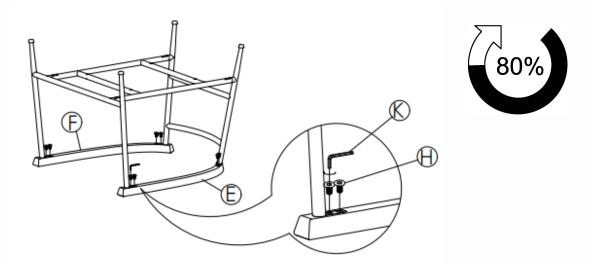


4 Attach the Seat & Back (A) to the assembled chair frame in Step 3, using Flat Washers (J), Spring Washers (L), Long Bolts (G), and Allen Wrench (K). Do not fully tighten.

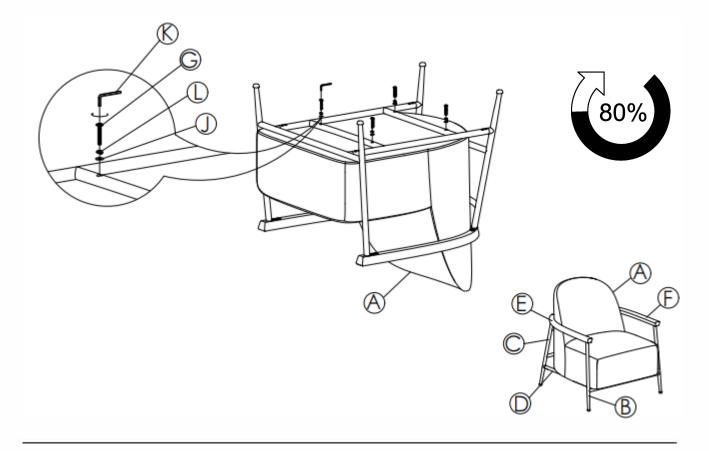


Put the assembled chair in Step 4 on a flat surface. Push arms left and right as necessary to level. Once level, **fully tighten all bolts.** 

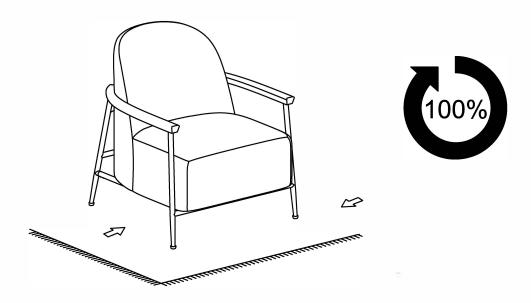

6 Complimentary Felt Pads (M) are included to help protect your floor or make the stool slide easier.

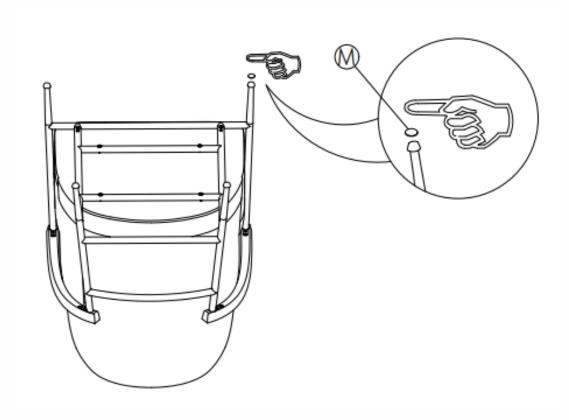

7 Turn the assembled stool upright and place on a flat surface.
Note: Each leg has an adjustable foot leveler to help level your chair.

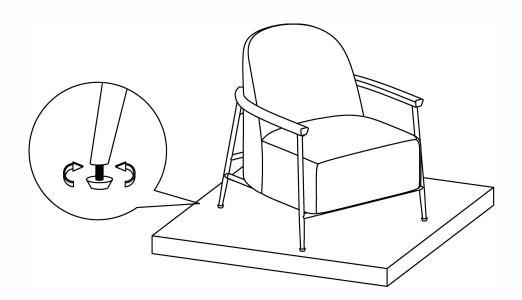

8 Assembly complete. Enjoy.

