
## DC7001 Assembly Manual


Dining Chair

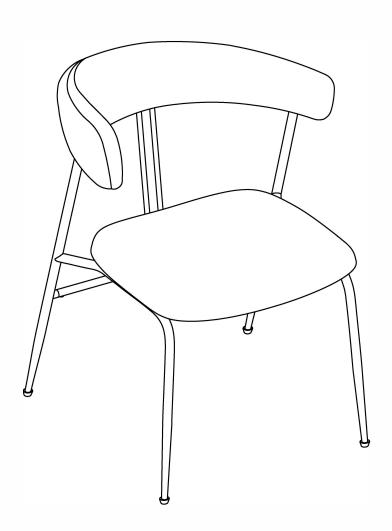



## **▲** CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

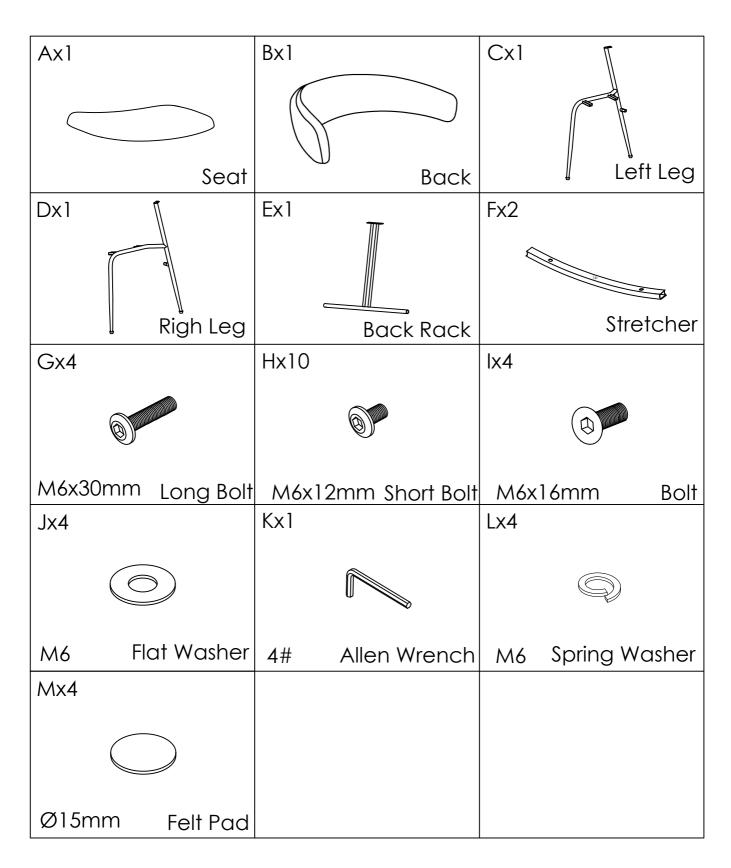


Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Note: Do NOT use power tools for assembly.


## **ASSEMBLY INSTRUCTIONS**

1 Attach the Stretchers (F) and the Back Rack (E) to the Left Leg (C), using Short Bolts (H) and Allen Wrench (K). Do not fully tighten.


Note: the Stretchers (F) and Back Rack (E) direction is shown below.

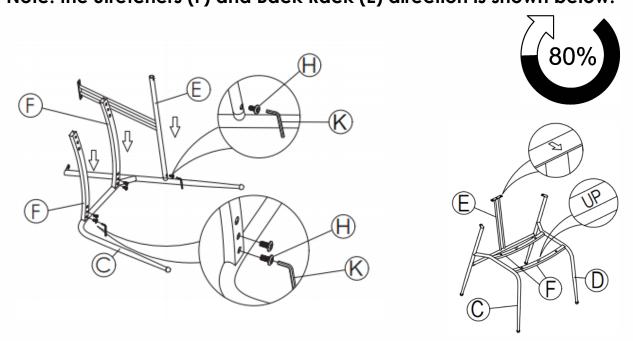

2 Attach the Right Leg (D) to the assembled chair frame in Step 1, using Short Bolts (H) and Allen Wrench (K). **Do not fully tighten.** 

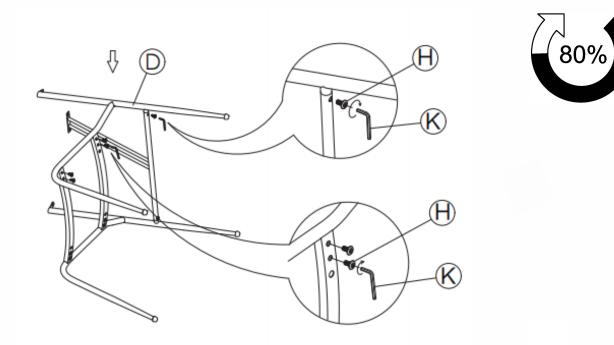


3 Attach the Back (B) to the assembled chair frame in Step 2, using Bolts (I) and Allen Wrench (K). **Do not fully tighten.** 

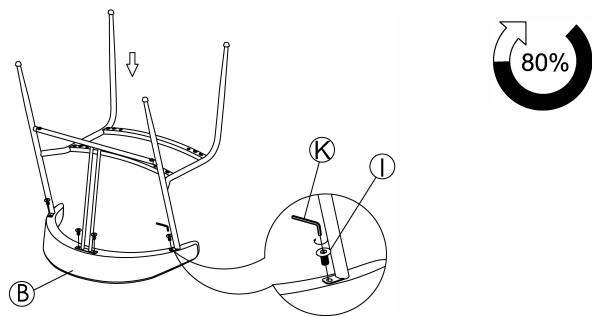


4 Attach the Seat (A) to the assembled chair frame in Step 3, using Flat Washers (J), Spring Washers (L), Long Bolts (G), and Allen Wrench (K).

After all bolts are attached, use Allen Wrench (K) to fully tighten (18 bolts in total).

Note: the Seat (A) direction is shown below.

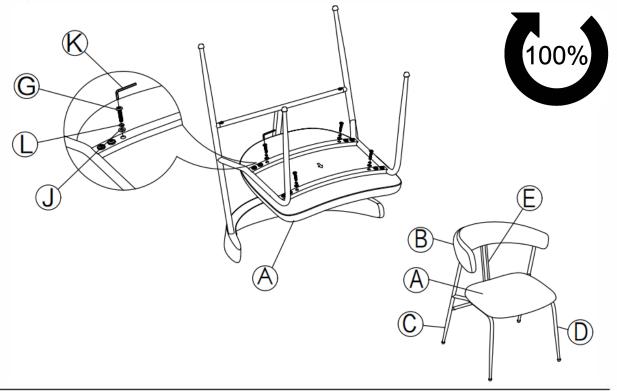


**5** Complimentary Felt Pads (M) are included to help protect your floor or make the stool slide easier.

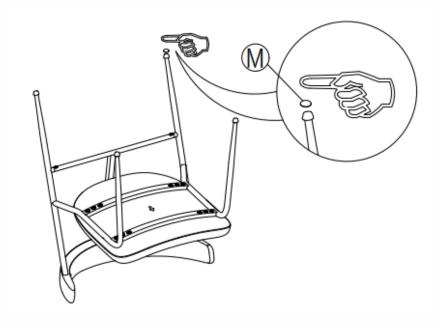

Turn the assembled stool upright and place on a flat surface.

Note: Each leg has an adjustable foot leveler to help level your chair.

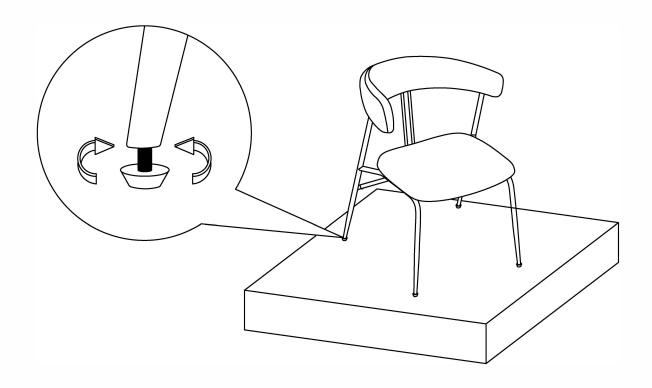



7 Assembly complete. Enjoy.

