

AC72907 Assembly Manual

Accent Chair

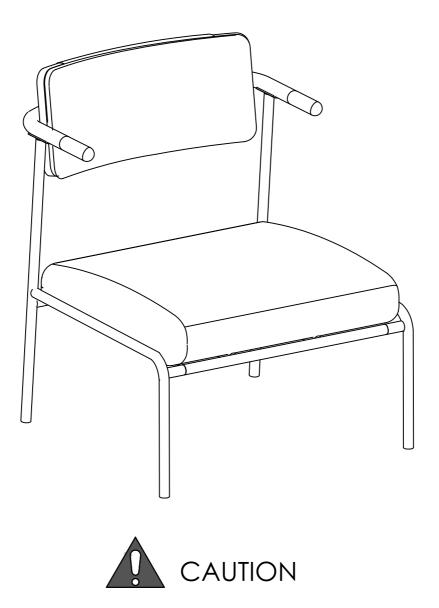

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

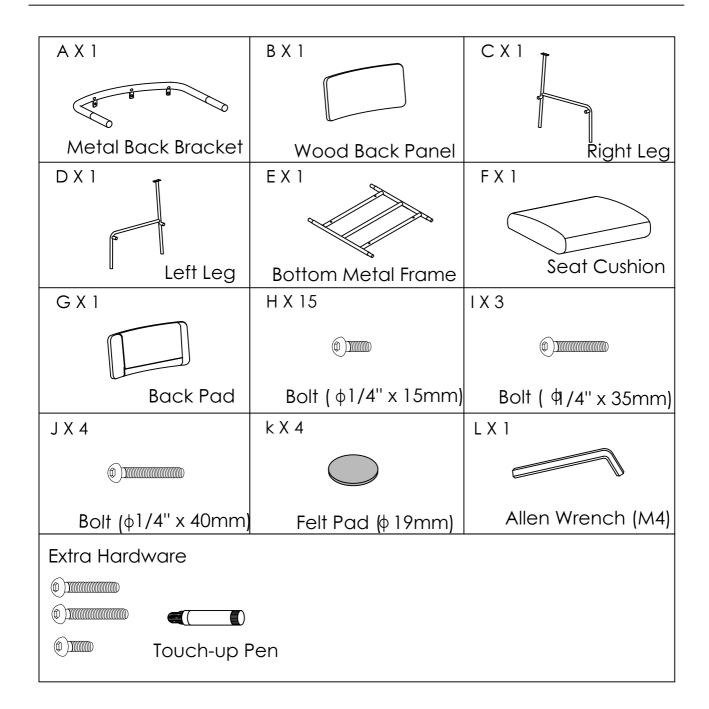

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Make sure all parts and hardware are present before assembly.


Note: Do NOT use power tools for assembly.

ASSEMBLY INSTRUCTIONS


Note: Assemble on a soft and smooth surface to prevent damage to product finish. Do not overtighten bolts to avoid stripping.



Connect Leg (C), Leg (D) and Bottom Metal Frame (E) together. Using Bolts (H) and Allen Wrench (L). Note: Do not fully tighten bolts.

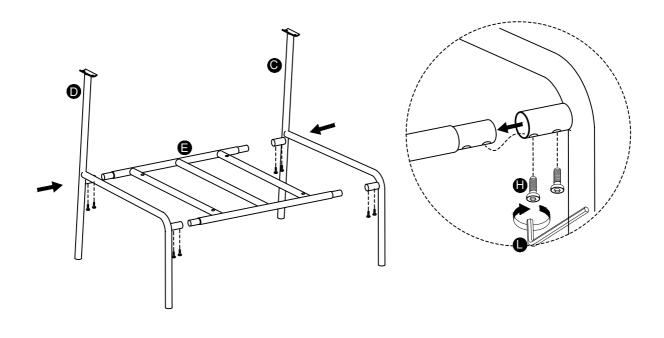


2 Attach Metal Back Bracket (A) to assembled metal base in Step 1, using Bolt (H) and Allen Wrench (L). Note: Do not fully tighten bolts.

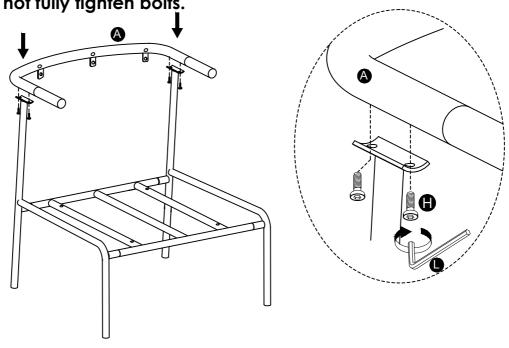


3 Attach Seat Cushion (F) to assembled metal frame in Step 2, using Bolts (J) and Allen Wrench (L). Fully tighten.

Note: Please pay attention to the direction of the seat cushion. The front label is on the bottom of the seat cushion.

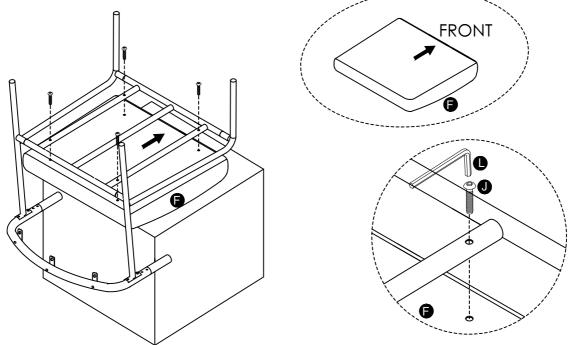


4 Attach Wood Back Panel (B), using Bolts (I), Bolts (H), and Allen Wrench (L). Do not fully tighten.

Note: Please pay attention to the direction of the Wood Back Panel (B). Do not fully tighten bolts.

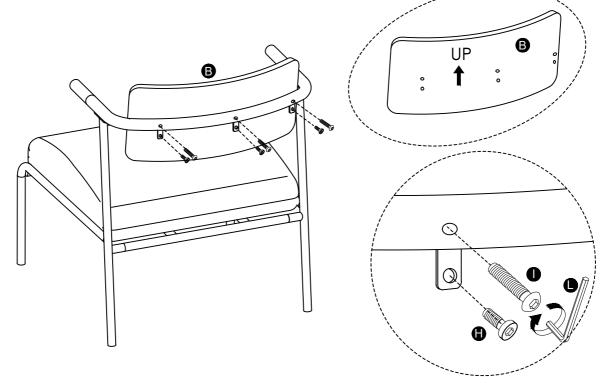





5 Put assembled chair on a flat surface. Push legs up or down as necessary to level. Once level, tighten all bolts. Note: Each leg has an adjustable foot leveler to help level your chair.

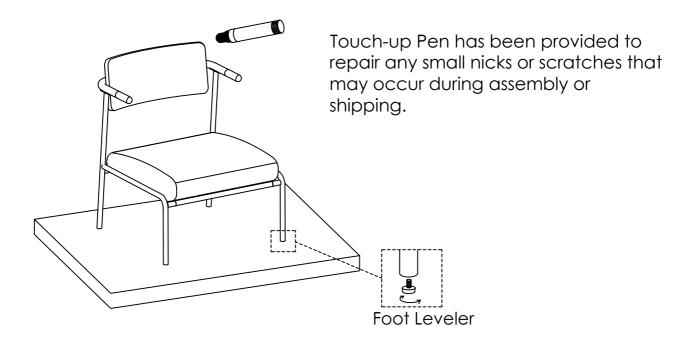

6 Complimentary Felt Pads (K) are included to help protect your floor or make the chair slide easier. If needed, attach the complimentary Felt Pads (K) to the leg

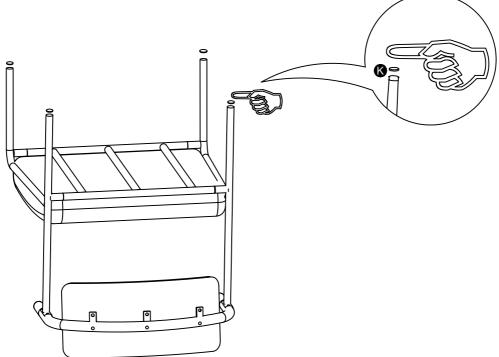

Complimentary Back Pad (G) is included. If you prefer an upholsteredback, please attach the Back Pad (G) to the Wood Back Panel (B).

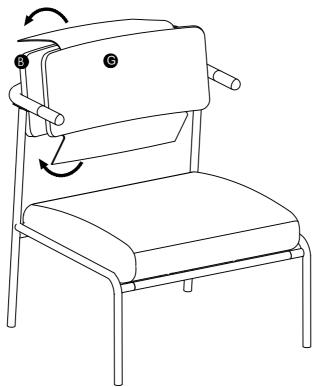



Assembly complete. Enjoy.

