











# BS72011 Assembly Manual

## Counter & Bar Height Stool

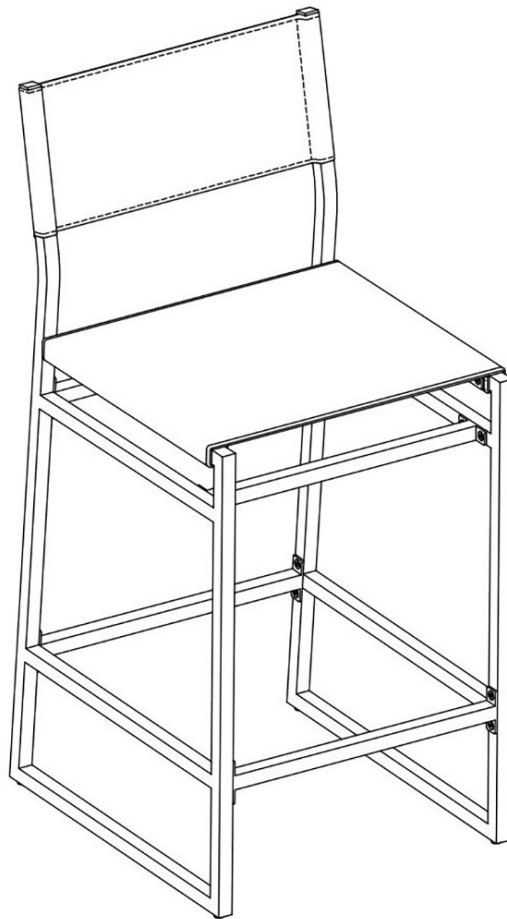
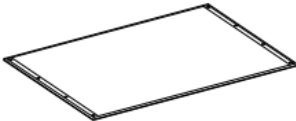
### **CAUTION**

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



|  |  |  |
|--|--|--|
| <p>A×1</p>  <p>Seat</p>                 | <p>B×1</p>  <p>Back</p>           | <p>C×1</p>  <p>Chair Frame (Left)</p> |
| <p>D×1</p>  <p>Chair Frame (Right)</p> | <p>E×2</p>  <p>Flat Metal Bar</p> | <p>F×4</p>  <p>Square Metal Tube</p>  |
| <p>G×24</p>  <p>M6x16mm</p>           | <p>H×1</p>  <p>4#</p>           | <p>I×4</p>  <p>Ø15</p>              |

Please read through the instructions below to familiarize yourself with the parts and steps before assembly. Assembly by two or more adults is strongly recommended.

## ASSEMBLY INSTRUCTIONS

- 1 Place the **left** section of Chair Frame (C) on your **right** and the **right** section of Chair Frame (D) on your **left**, with the holes facing up. Then, wrap the left and right end of Seat (A) around Chair Frame (C) and (D) as indicated in the close-up.

Note: This is the bottom side of the seat.

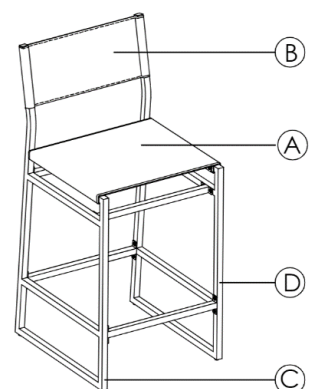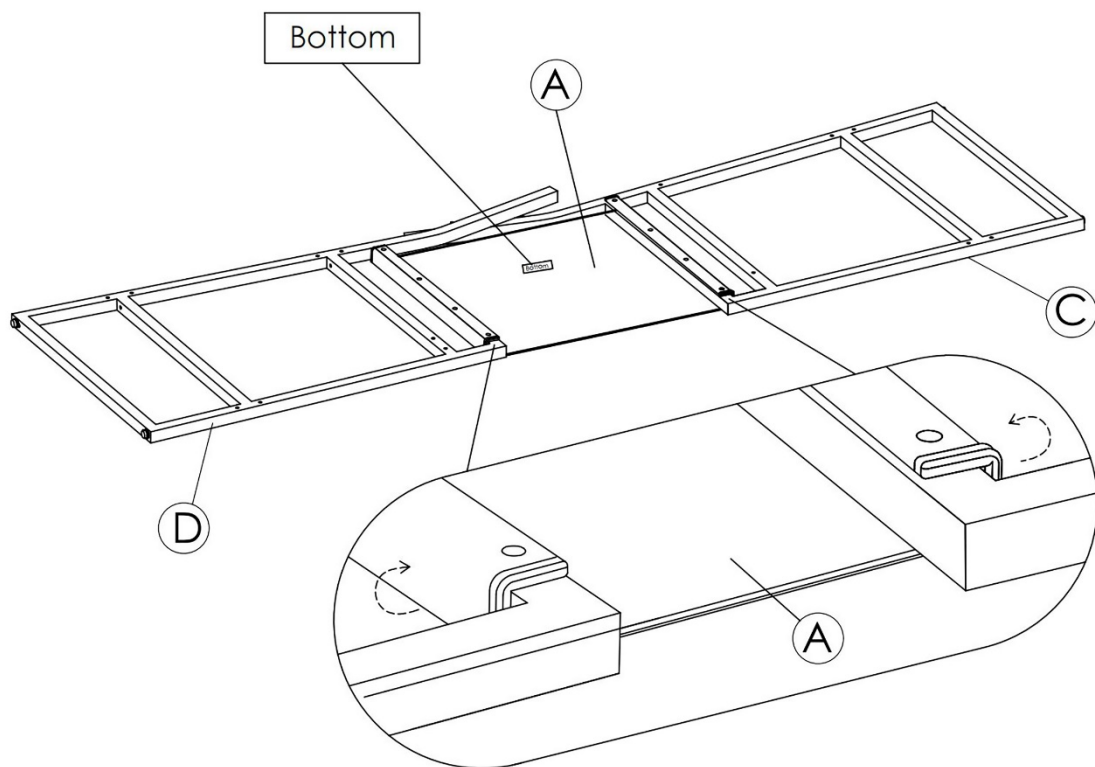


- 2** Attach Flat Metal Bar (E) to Seat (A) and Chair Frame, using Bolts (G) and Allen Wrench (H). Please note the flat side of the Flat Metal Bar (E) should face down and the dented side should face you. Loosely attach the Bolts (G) one by one and keep them loose. Do not fully tighten. After all 4 bolts are attached, use Allen Wrench (H) to tighten.


Dented Side (Facing You)




Flat Side (Facing Down)

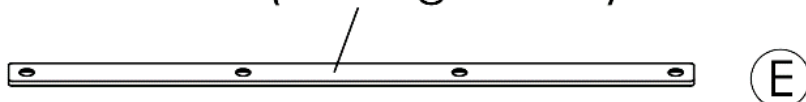

Note: This is the bottom side of the seat.


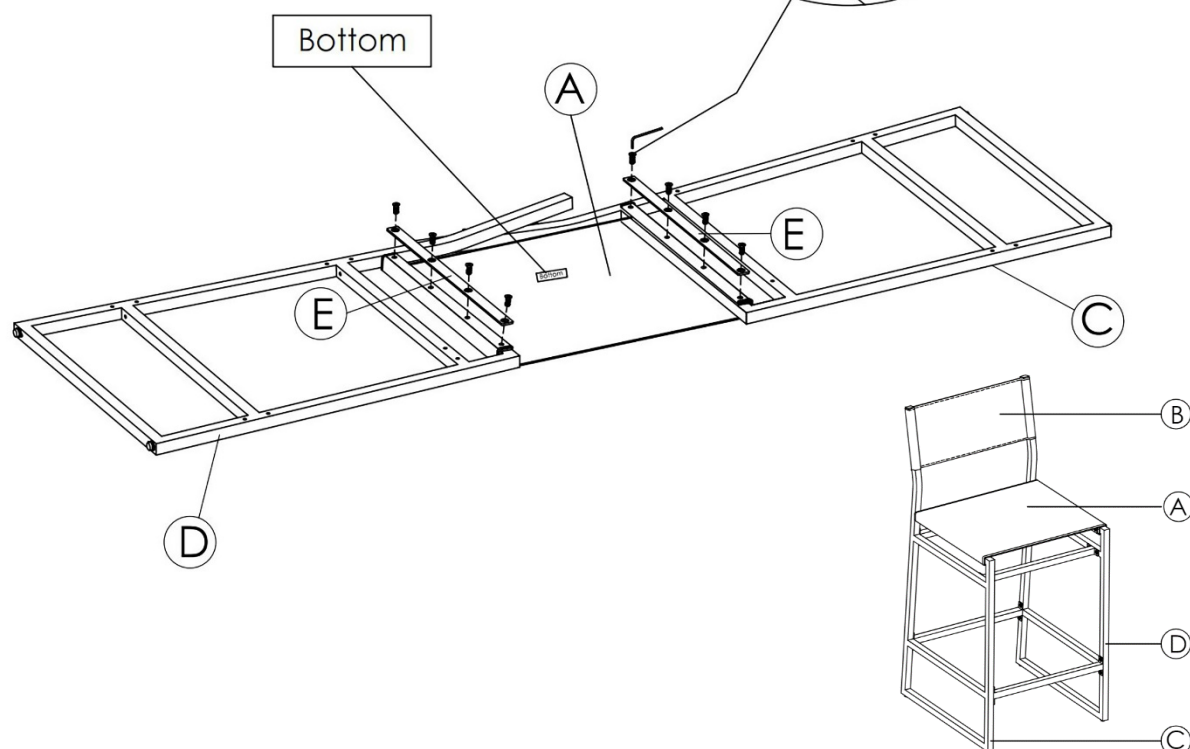


- 3** Slide Back (B) into Chair Frame (C) and (D).


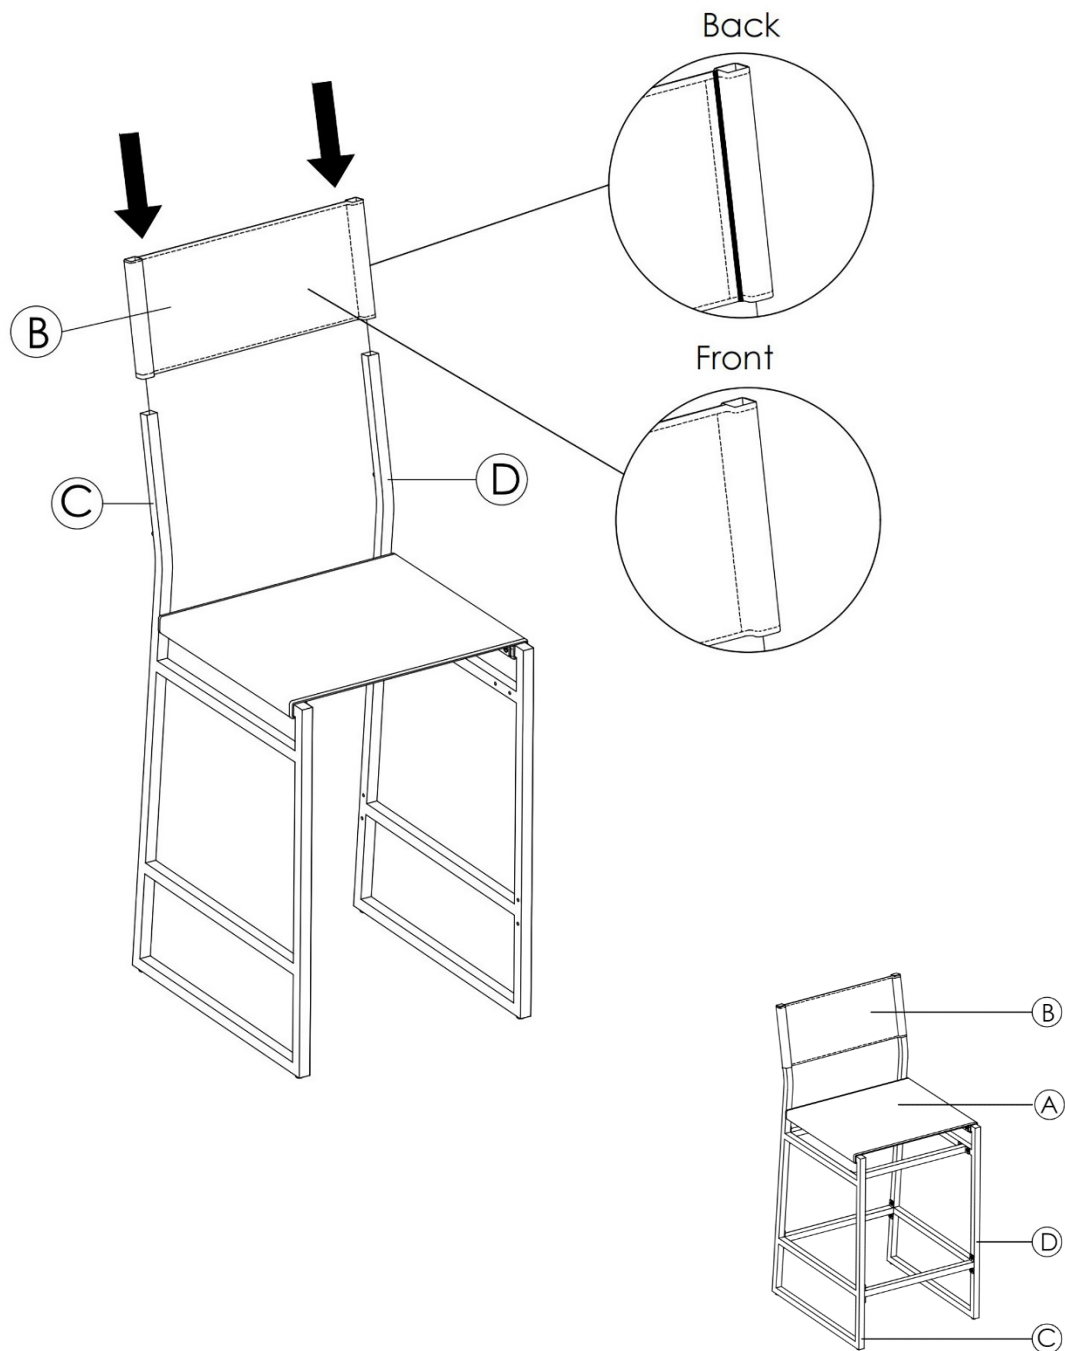


- 4** Attach Square Metal Tube (F) to Chair Frame (C) and (D), using Bolts (G) and Allen Wrench (H).


**Note: Do not fully tighten yet.**

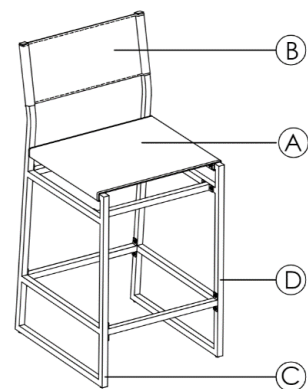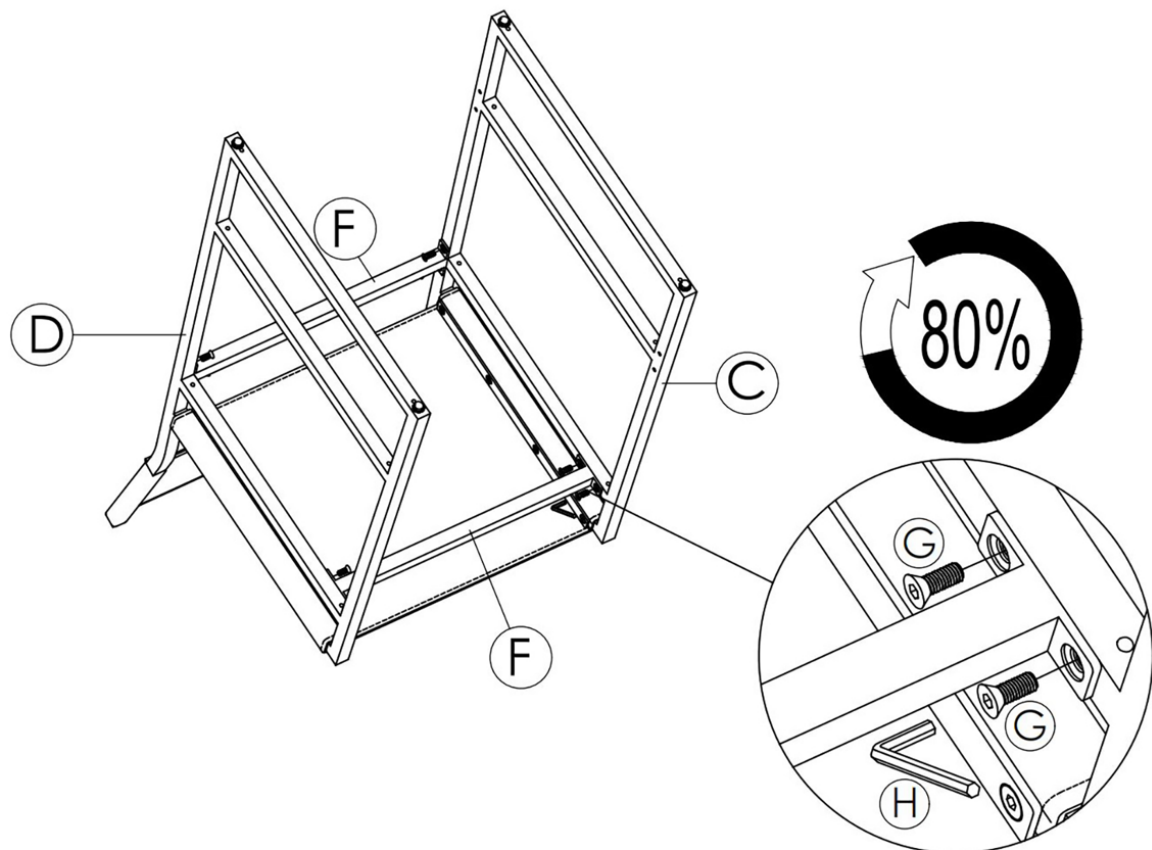

- 5** Attach Square Metal Tube (F) to Chair Frame (C) and (D), using Bolts (G) and Allen Wrench (H). **Fully tighten all bolts.**

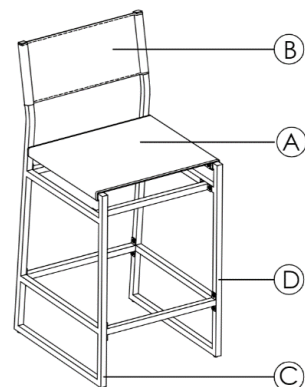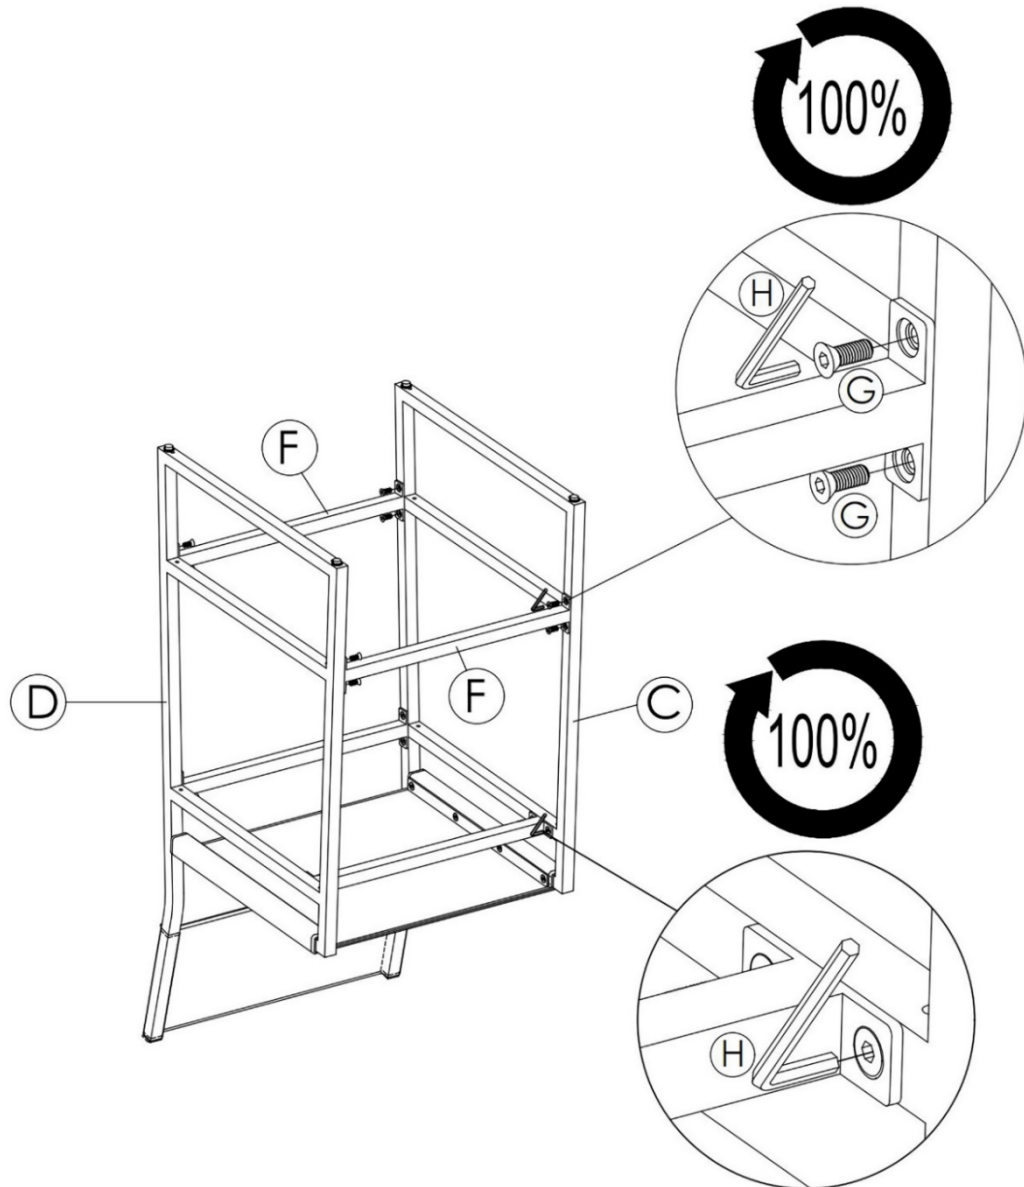

- 6** Complimentary Felt Pads (I) are included to help protect your floor or make the chair slide easier. If needed, attach the complimentary Felt Pads (I) to the foot leveler.

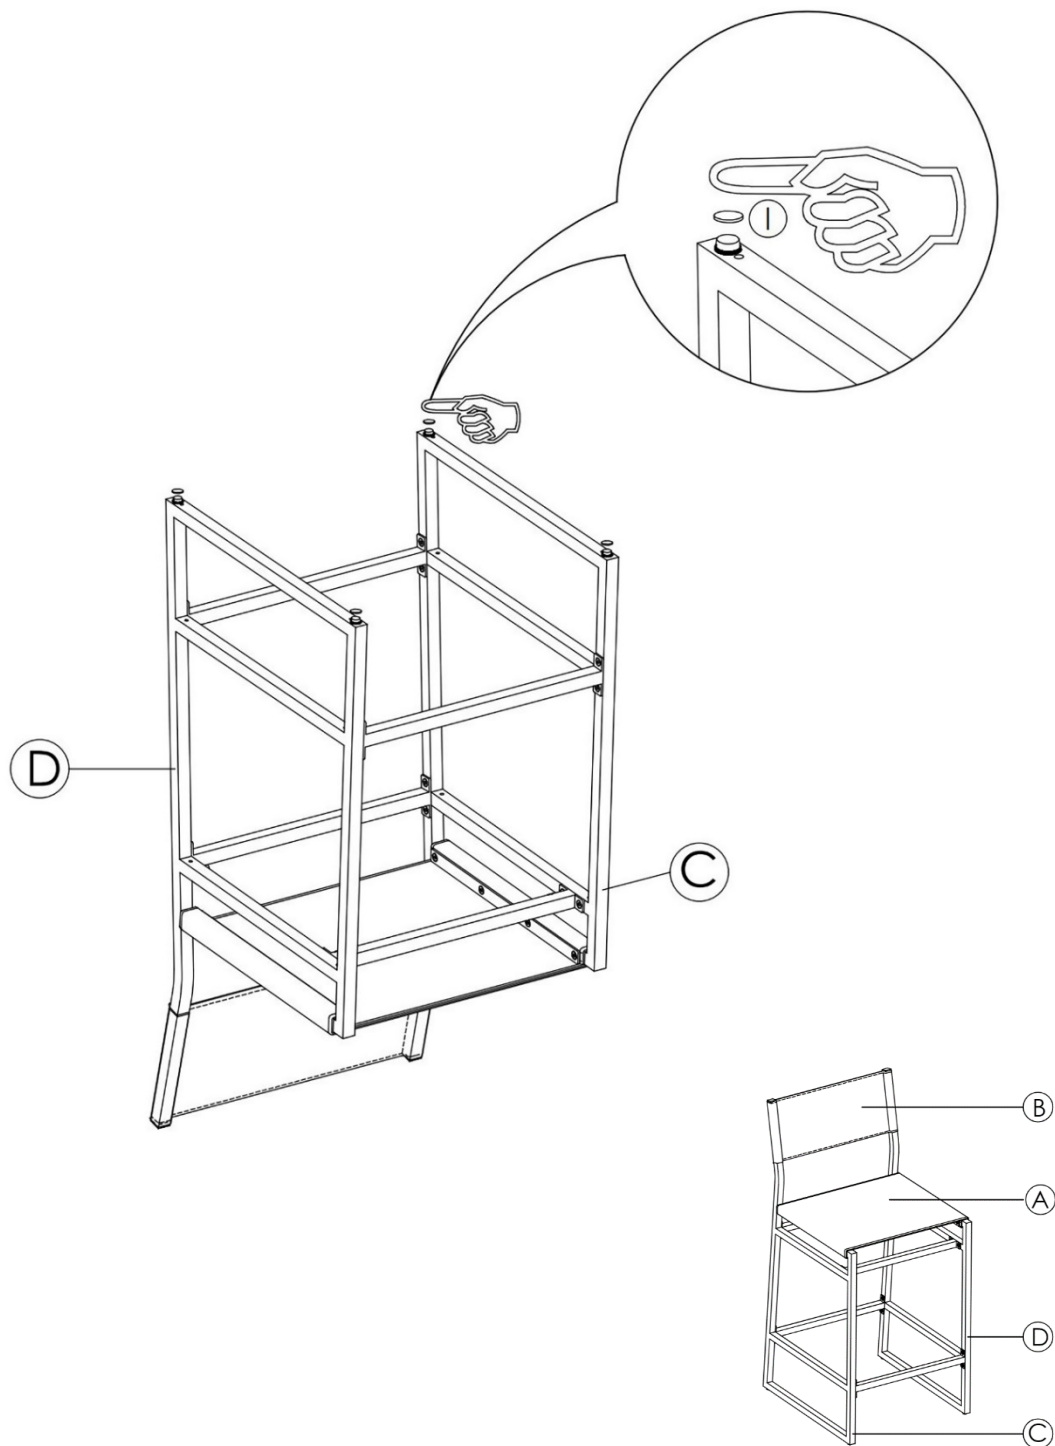



**7** Assembly complete. Enjoy.

**Note:** Each leg has an adjustable foot leveler to help level your chair.

