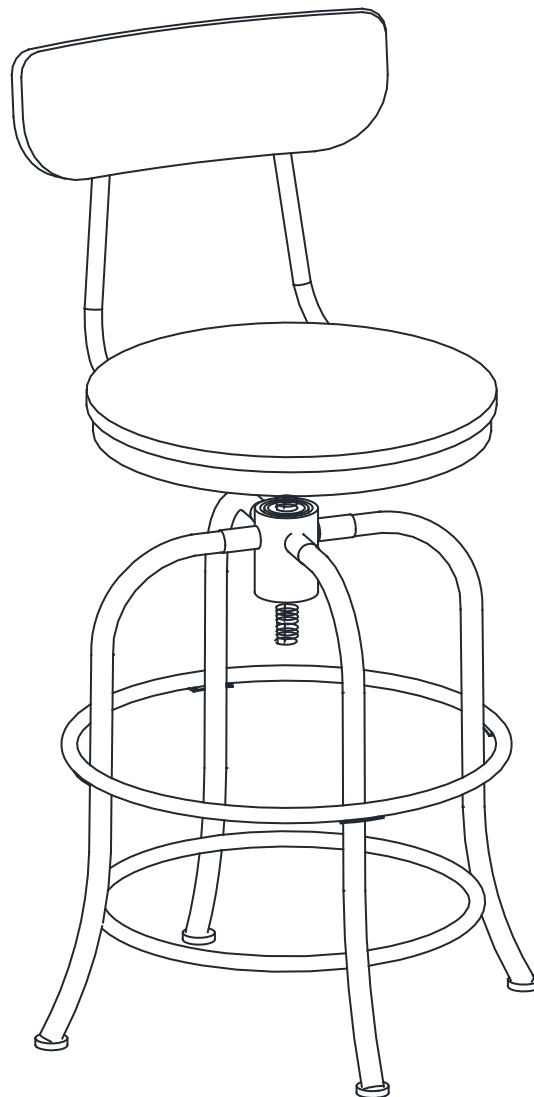



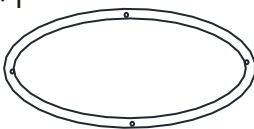
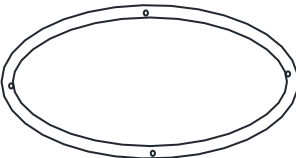
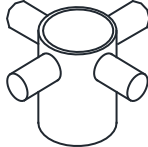






















Assembly Manual for KF-Y2008 Adjustable Height Swivel Stool



CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

<p>A×1</p>  <p>Metal Back Bracket</p>	<p>B×1</p>  <p>Wood Seat Panel</p>	<p>C×4</p>  <p>Leg</p>
<p>D×1</p>  <p>Footrest</p>	<p>E×1</p>  <p>Squared Frame</p>	<p>F×1</p>  <p>Post</p>
<p>G×1</p>  <p>Screw</p>	<p>H×1</p>  <p>Wood Back Panel</p>	<p>I x 4</p>  <p>Bolt (φ1/4" x 30mm)</p>
<p>J×1</p>  <p>Allen Wrench (M4)</p>	<p>K×6</p>  <p>Open-Ended Wrench</p>	<p>Lx8</p>  <p>Spring Washer</p>
<p>M× 12</p>  <p>Flat Washer</p>	<p>Nx 12</p>  <p>Bolt (φ1/4" x 12mm)</p>	<p>Ox5</p>  <p>Bolt (φ1/4" x 15mm)</p>
<p>Px 4</p>  <p>Bolt (φ1/4" x 25mm)</p>	<p>Qx4</p>  <p>Bolt (φ1/4" x 30mm)</p>	<p>R × 4</p>  <p>Nut (φ1/4")</p>
<p>Extra Hardware</p>         <p>Touch-up Pen</p>		


Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Make sure all parts and hardware are present before assembly.


Note: Do NOT use power tools for assembly.

Note: Assemble on a soft and smooth surface to prevent damage to product finish. Do not overtighten bolts to avoid stripping.


- 1** Attach Legs (C) to Post (F), using Bolts (N) and Allen Wrench (J).
Note: Do not fully tighten bolts.

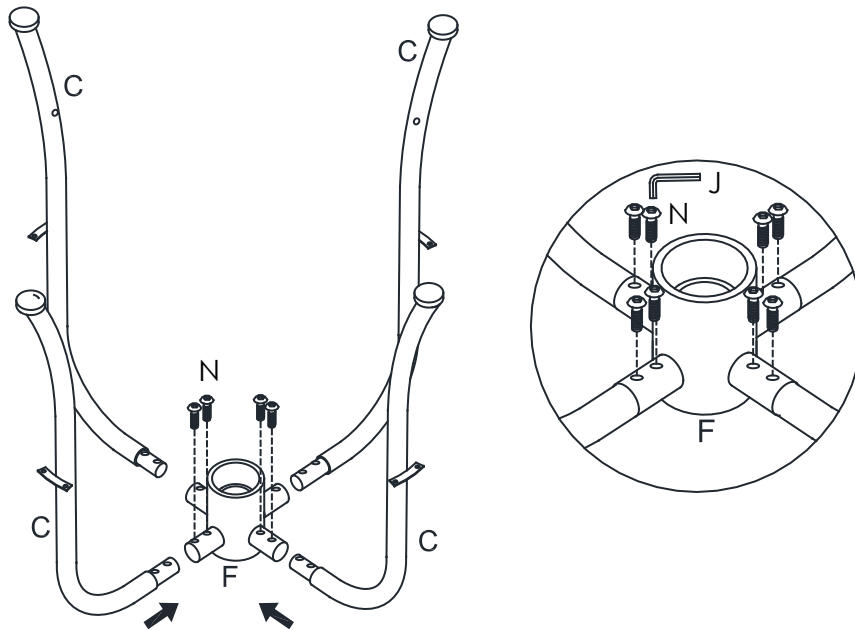


- 2** Attach Large Footerst (E) to assembled stool base in Step 1, using Bolts (N). After all 8 bolts are attached, use Allen Wrench (J) to tighten.

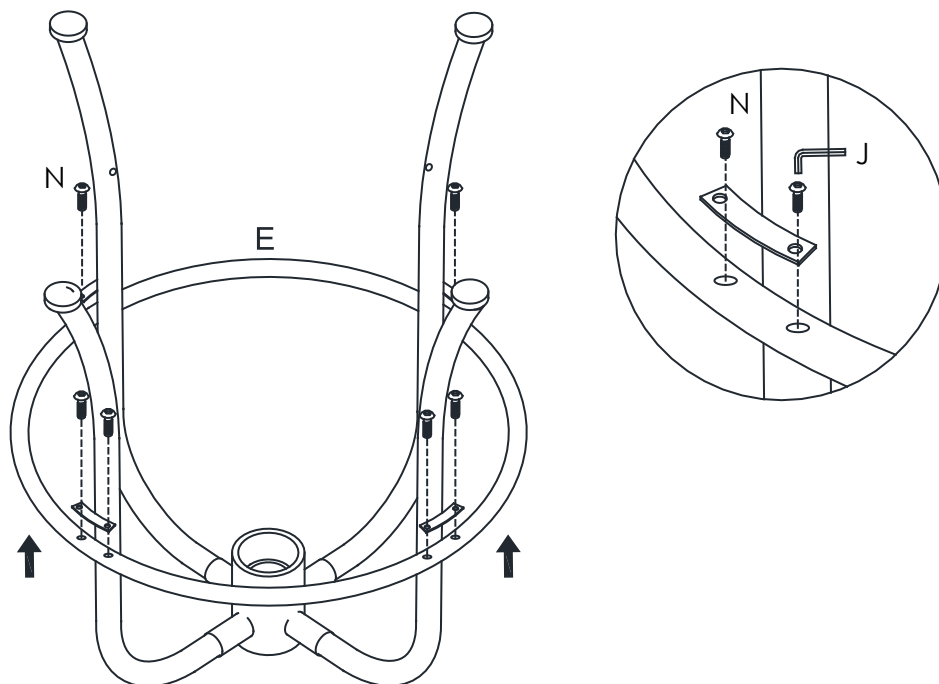


- 3** Attach Small Footerst (D), using Bolts (Q) and Allen Wrench (J).
Note: Do not fully tighten bolts.

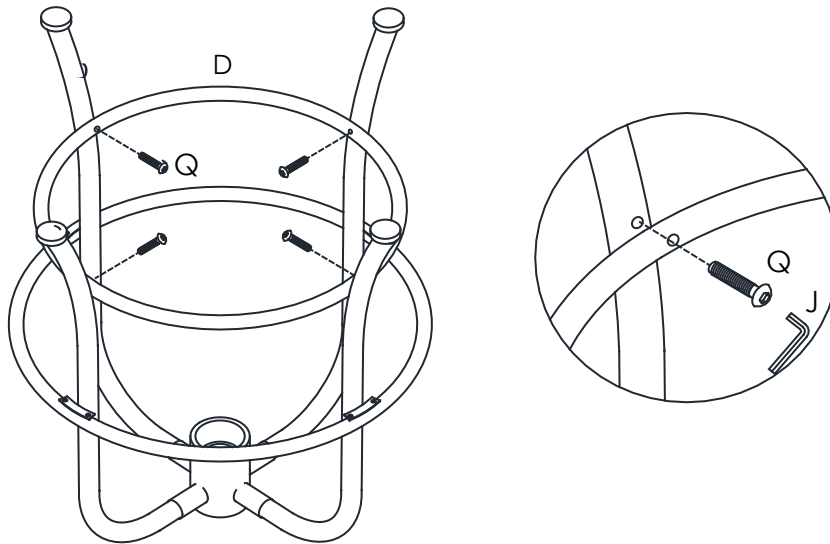


- 4** Connect Metal Back Bracket (A) to Wood Seat Panel (B), using Bolts (I), Flat Washers (M), Spring Washers (L), Nuts (R), Allen Wrench (J), and Open-Ended Wrench (K). Fully tighten.

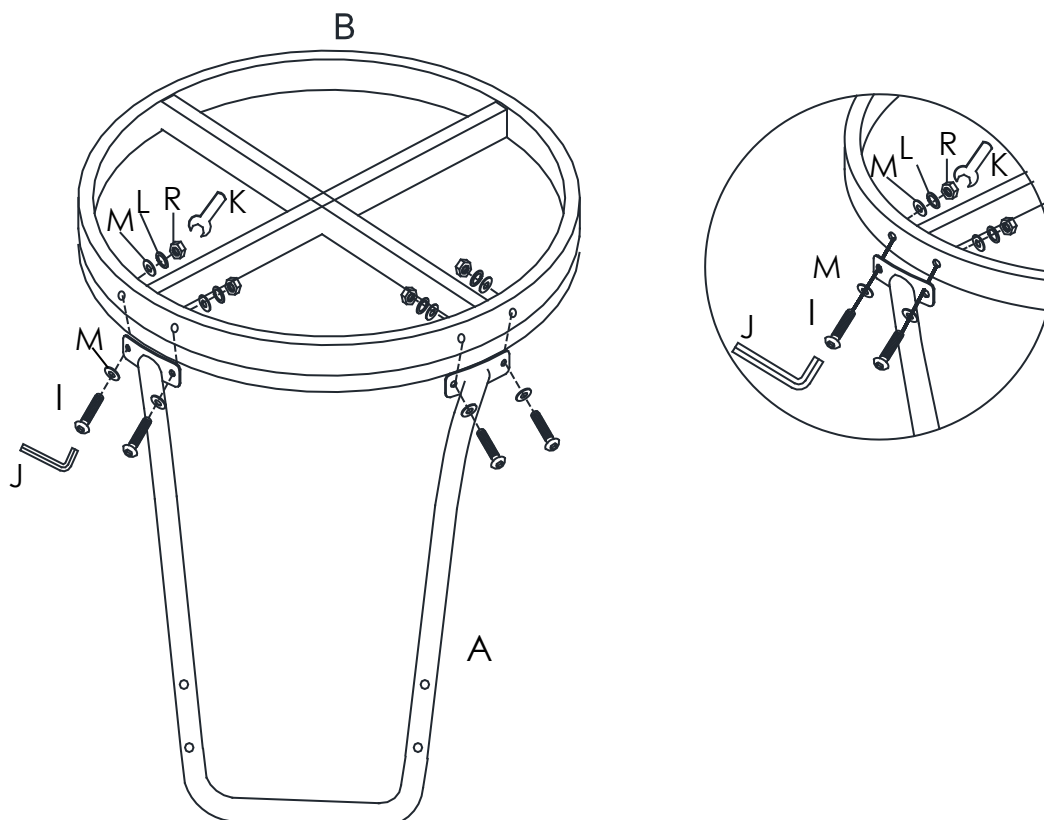


- 5** Attach Screw (G) to assembled stool seat, using Bolts (O), Spring Washers (L), and Flat Washers (M) After all 4 bolts are attached, use Allen Wrench (J) to tighten.

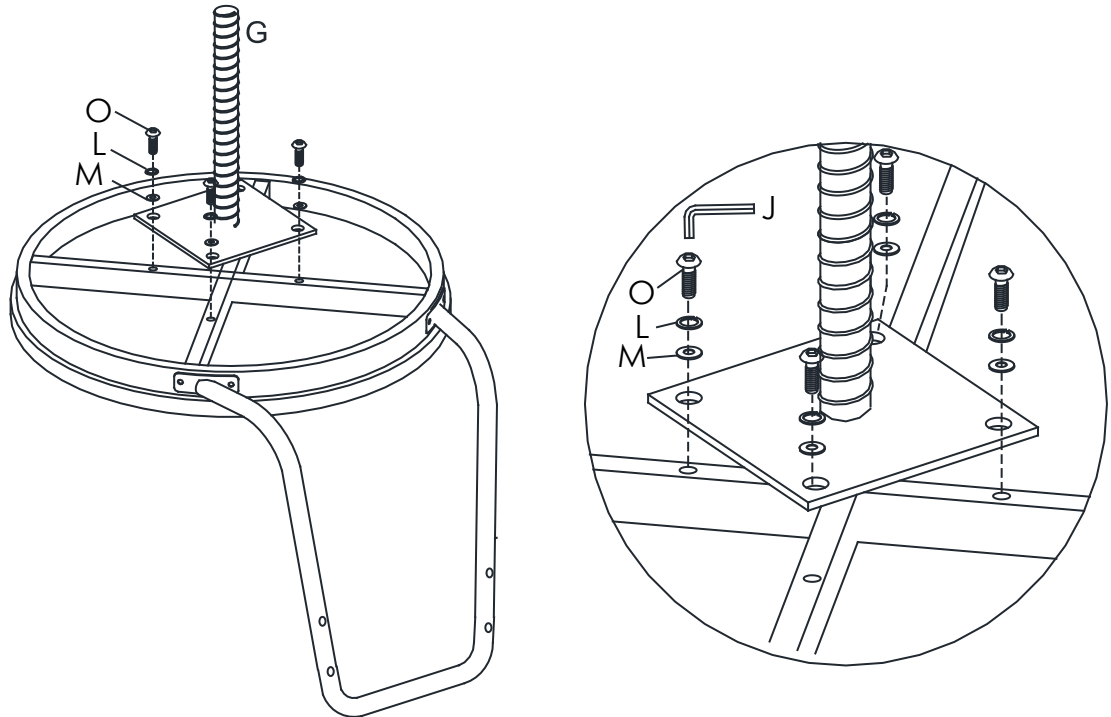

- 6** Slide the assembled stool base into Screw (G). Attach Bolt (O) to Screw (G). Use Allen Wrench (J) to tighten.

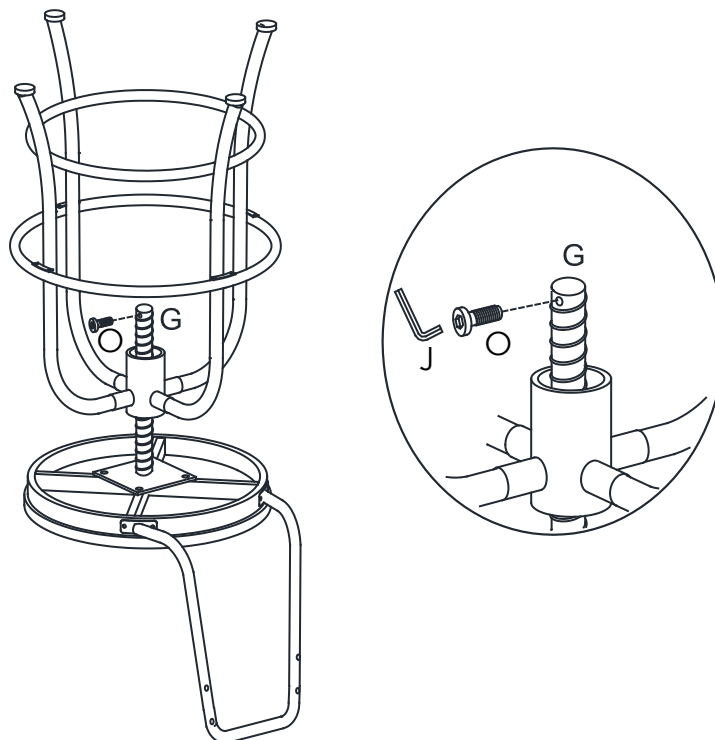


- 7** Attach Wood Back Panel (H) to assembled stool back frame, using Bolts (P). After all 4 bolts are attached, use Allen Wrench (J) to tighten.

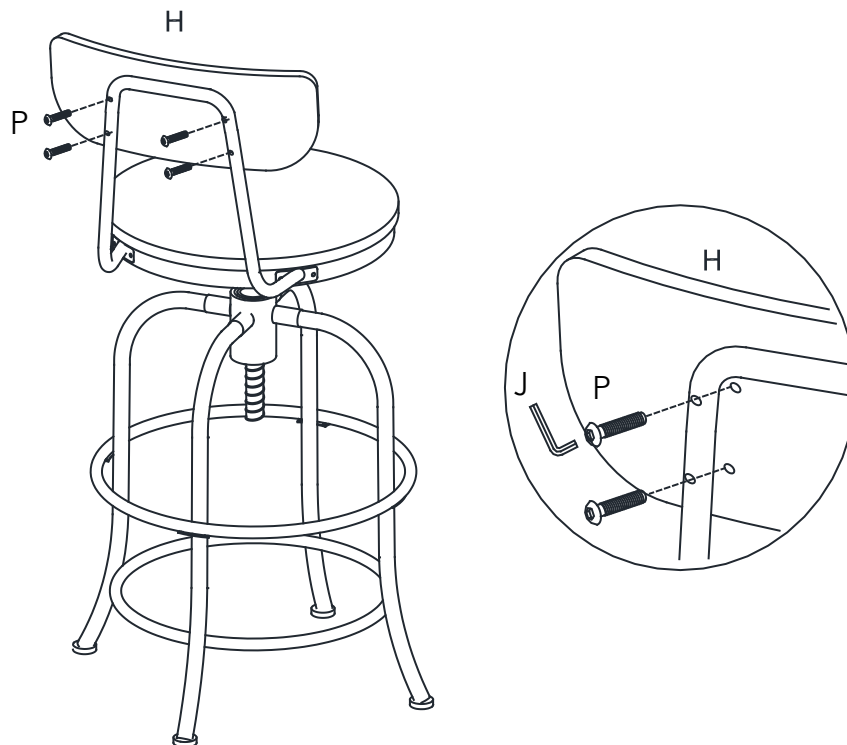

- 8** Put assembled stool on a flat surface. Push legs up or down as necessary to level. **Once level, tighten all bolts.**

Note: Each leg has an adjustable foot leveler to help level your chair.

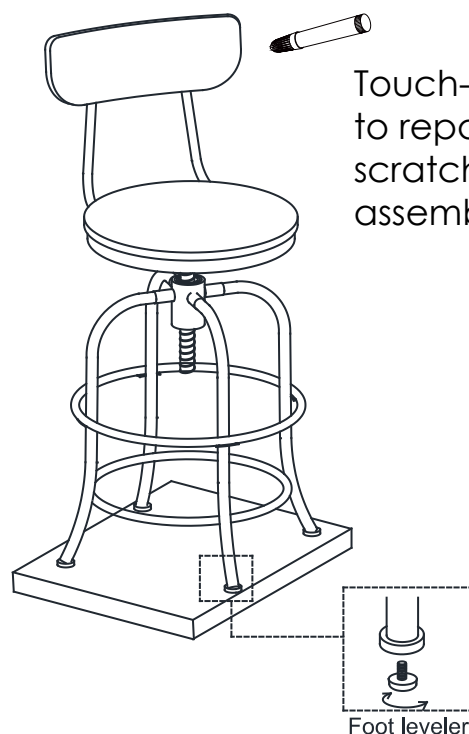

Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.