


## AC72905 Assembly Manual











### Swivel Accent Chair

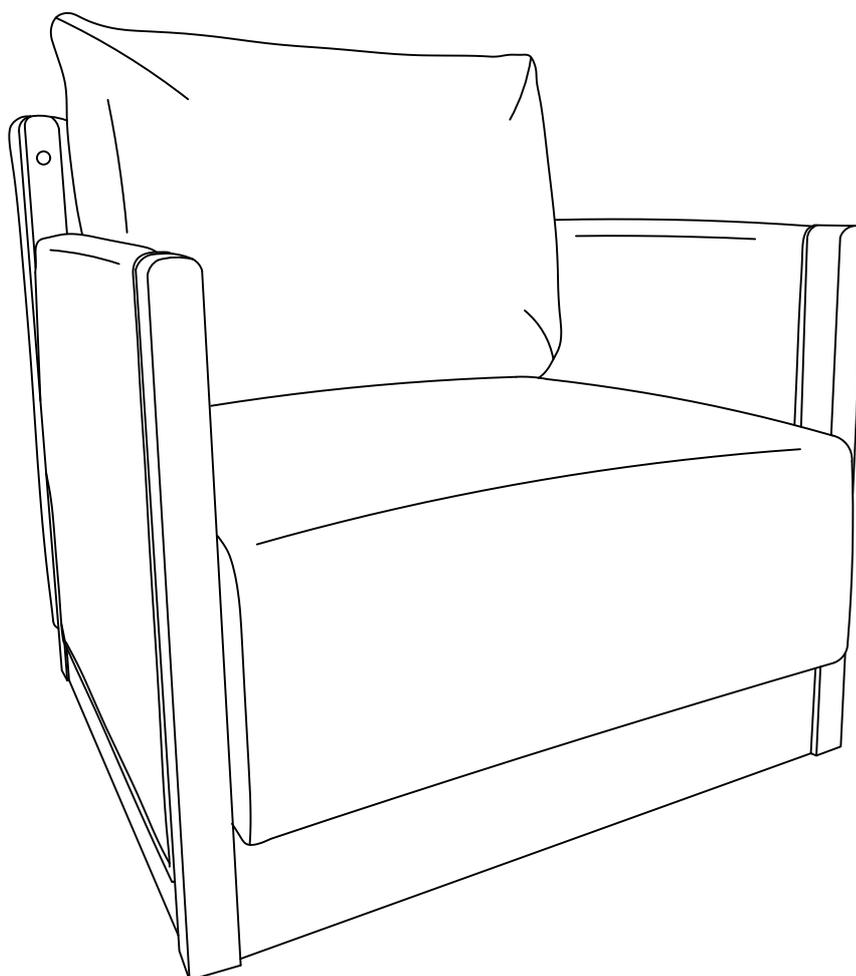

### CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.


PLEASE READ AND KEEP FOR FUTURE REFERENCE.
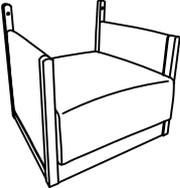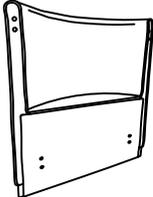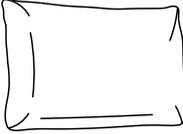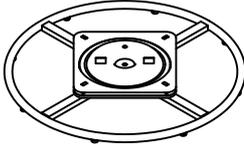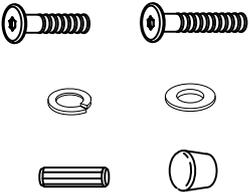
<p>A x 1</p>  <p>Seat</p>	<p>B x 1</p>  <p>Backrest</p>	<p>C x 1</p>  <p>Back Cushion</p>	<p>D x 1</p>  <p>Base Frame</p>
<p>H1 x 4</p>  <p>Short Bolts M6 x 30mm</p>	<p>H2 x 4</p>  <p>Long Bolts M6 x 50mm</p>	<p>H3 x 8</p>  <p>Lock Washers 5/16"</p>	<p>H4 x 6</p>  <p>Flat Washers 1/4" x 19mm</p>
<p>H5 x 4</p>  <p>Wood Dowel M8 x 30mm</p>	<p>H6 x 1</p>  <p>Allen Wrench M4 x 100mm</p>	<p>H7 x 2</p>  <p>Wooden Plugs</p>	
<p>Extra Hardware</p> 	<p>Not Included</p> 		


### Before you begin:

1. Check if you have received all parts using the diagram on this page. Do not start the assembly process until all parts are present. If you have not received all parts or received wrong or damaged ones, please contact our customer service and we will get back to you.
2. Do not discard any of the packaging until you are certain that you have all the necessary parts for the assembly.
3. Do NOT use power tools for assembly.


- 1 Insert the Wood Dowel (H5) to the Seat (A).  
Attach Backrest (B) to the chair seat.

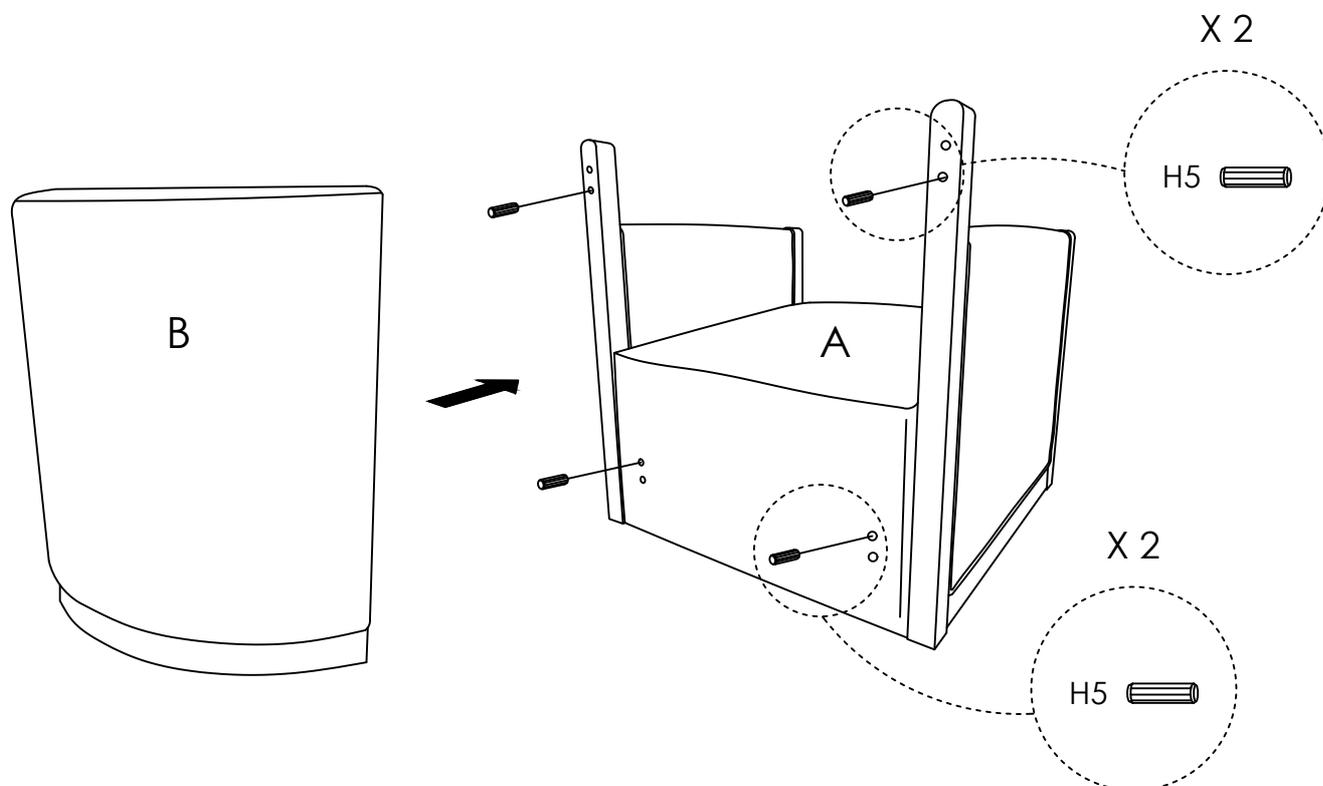


- 2 Move on to the holes from Backrest (B), use Lock Washers (H3), Long Bolts (H2) and Allen Wrench (H6) to assemble. **Do not fully tighten yet.**

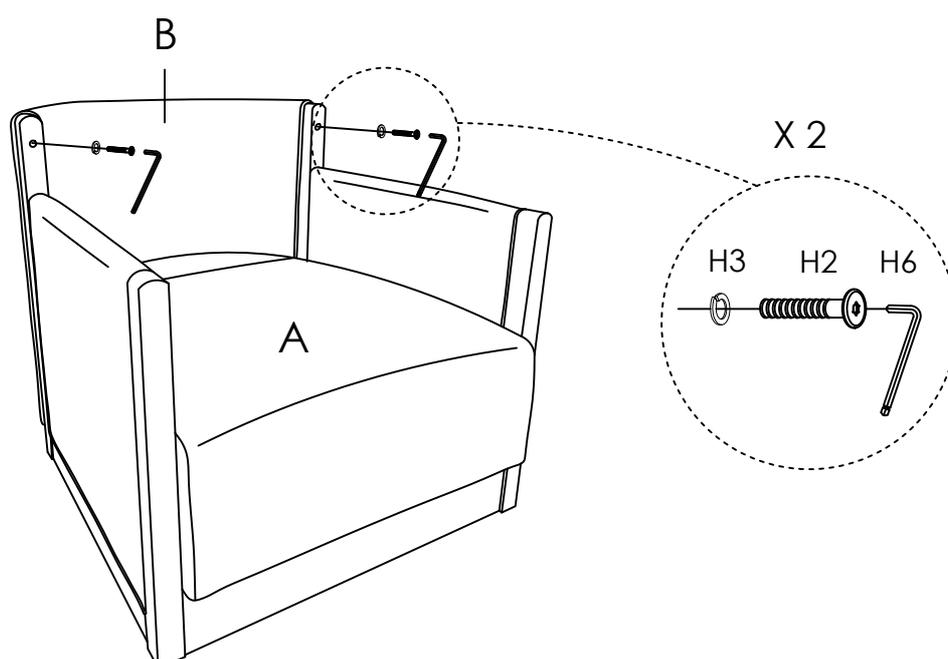


- 3 Detach the bottom fabric underneath Seat.

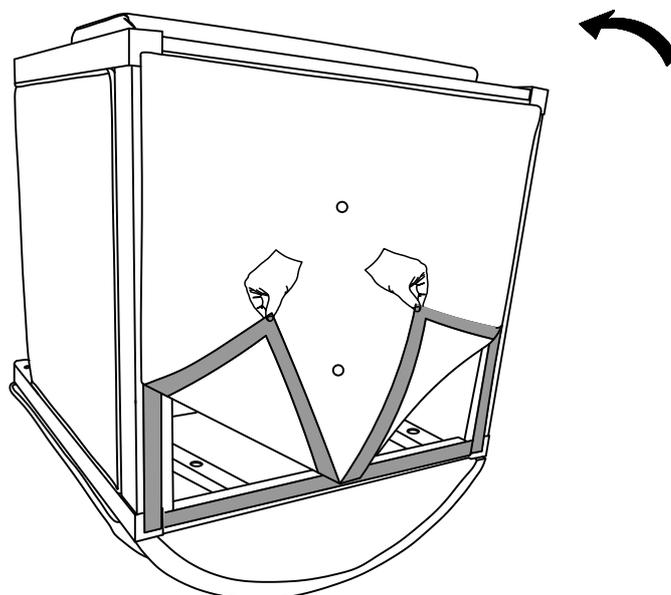


- 4 Assemble the Backrest (B) using Flat Washers (H4), Lock Washers (H3), Long Bolts (H2) and Allen Wrench (H6). **Fully tighten.**

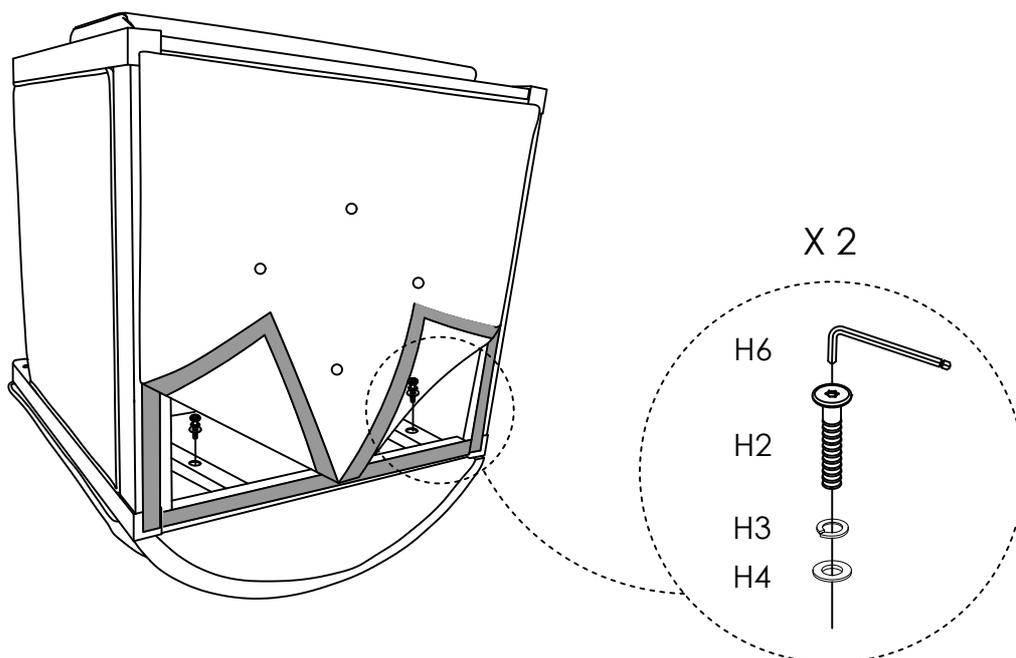


- 5** Attach the Velcro underneath the seat cushion as indicated below.

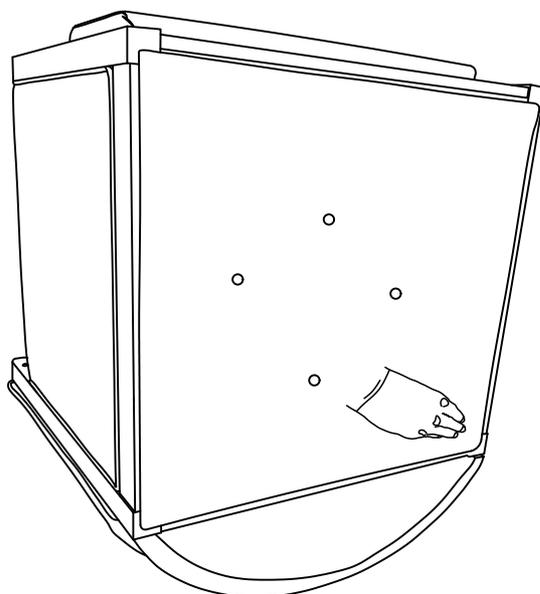


- 6** Rotate the Swivel Plate on Base Frame (D) by 45 degree.

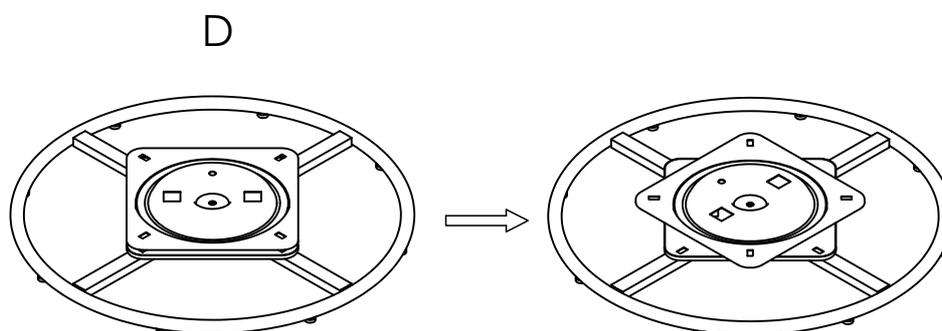


- 7** Attach the Base Frame (D) to Seat, using Flat Washers (H4), Lock Washers (H3), Short Bolts (H1) and Allen Wrench (H6). **Fully tighten.**

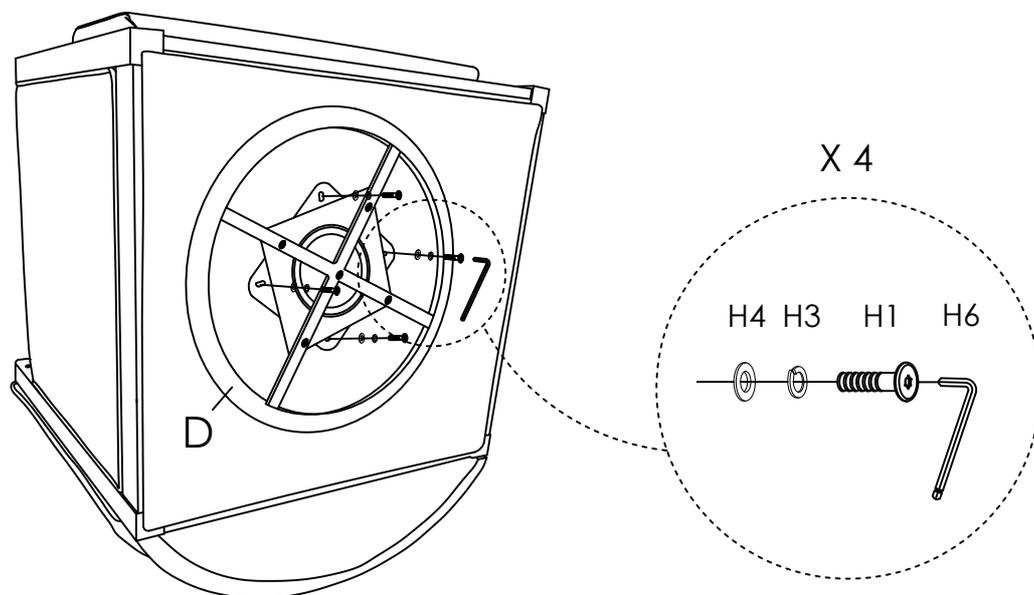


- 8** Fully tighten all bolts in Step 2 using Allen Wrench (H6). Then gently tap the Wooden Plugs (H7) into Backrest (B).

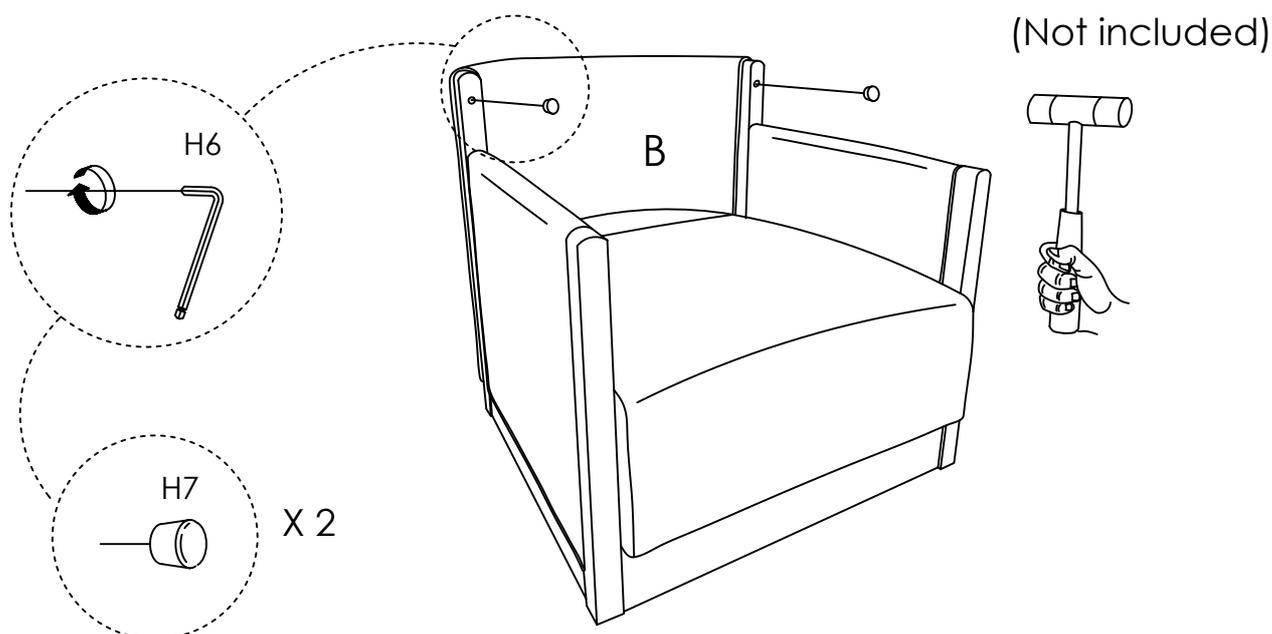

- 9 Put on the Back Cushion (C).

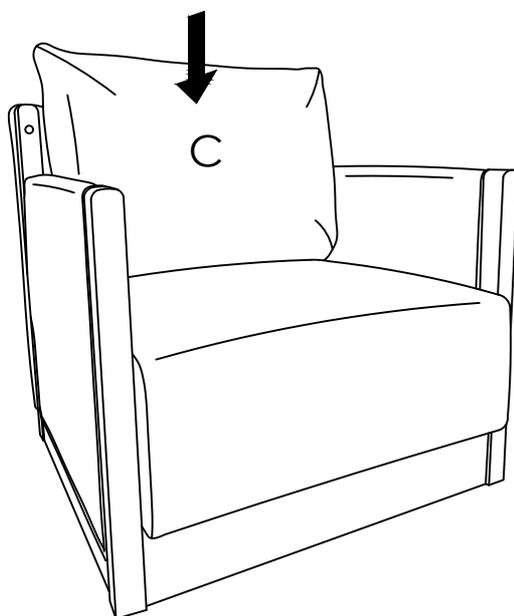

- 10 Assembly complete. Take a spin and enjoy.

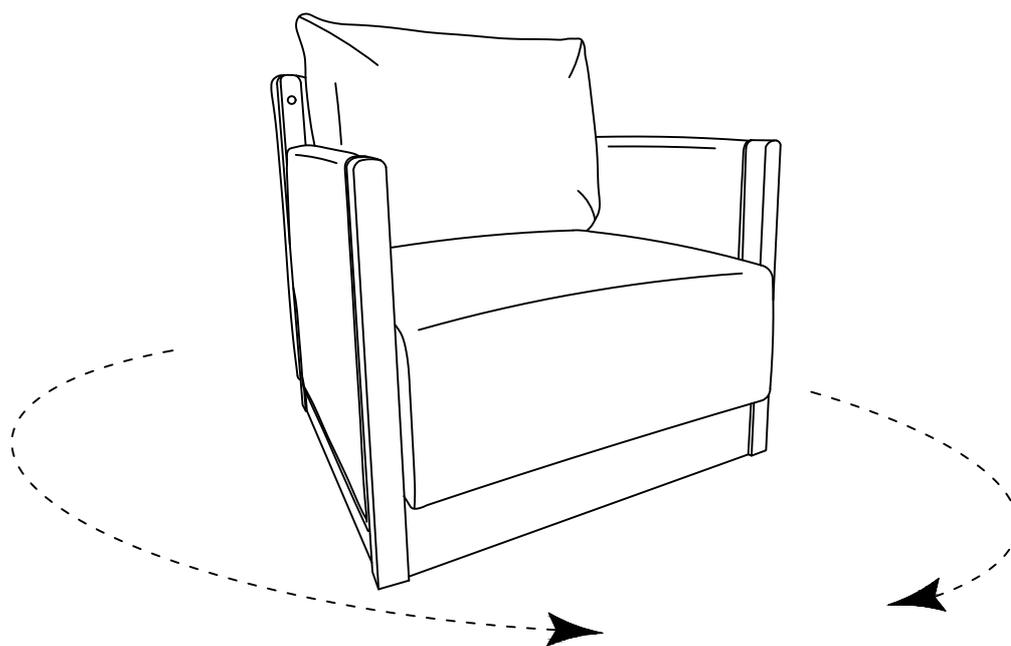

## PRODUCT WARRANTY

- . 1-year limited on cover against splitting, peeling, and/or tearing.
- . 1-year limited on internal and external frame structure.
- . 1-year limited on cushioning material, seat springs and mechanism.

## CARE & MAINTENANCE

Water Based Cleaner 'W' Spot clean using the foam only from a water-based cleaning agent such as a mild detergent or non-solvent upholstery shampoo product. Apply foam with a soft in circular motion. Vacuum when dry.

Do not place furniture in direct sunlight and keep furniture at least 60 cm / 2 feet from heat sources to avoid fading.

## Follow Us



@chitalivingofficial



@chitaliving



@chitaliving



@chitaliving

---

If at any step you need a helping hand, we're always here for you. You can email us, or hop into a live chat on our website - whatever method is convenient for you.



support@chitaliving.com