


KJW.Y033 Assembly Manual

Counter & Bar Height Stool

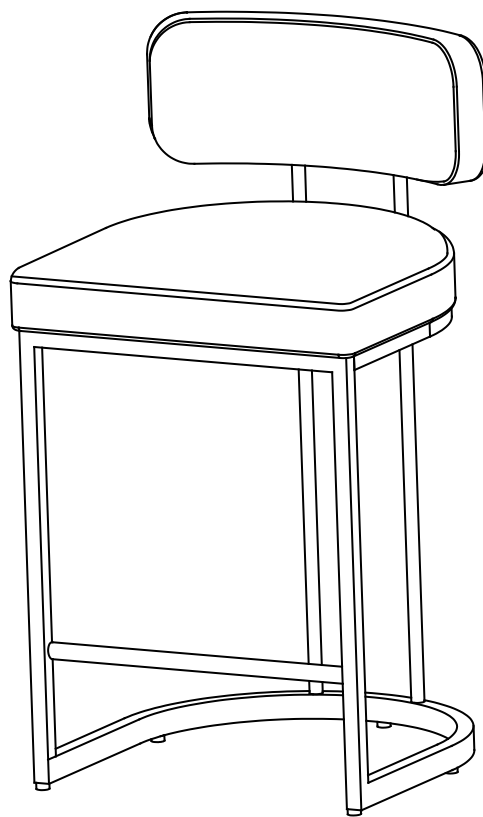













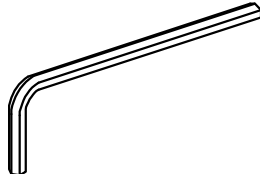

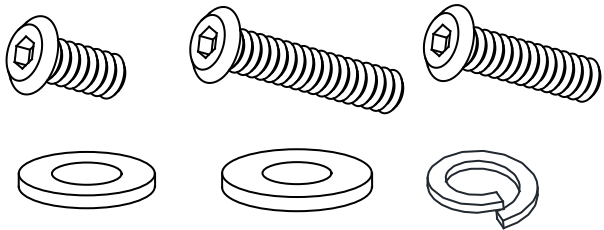


CS.furniture@outlook.com



CAUTION

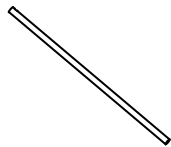THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.


<p>Ax1</p>  <p>Back Cushion</p>	<p>Bx1</p>  <p>Seat Cushion</p>	<p>Cx1</p>  <p>Handhold</p>	<p>Dx2</p>  <p>Rear Leg</p>
<p>Ex2</p>  <p>Front Leg</p>	<p>Fx1</p>  <p>Round Base</p>	<p>Gx1</p>  <p>Seat Frame</p>	<p>Hx1</p>  <p>Footrest</p>
<p>Ix12</p>  <p>M6 x 16mm Bolt</p>	<p>Jx4</p>  <p>M6 x 40mm Bolt</p>	<p>Kx6</p>  <p>M6 x 30mm Bolt</p>	<p>Lx14</p>  <p>Ø6xØ14 Flat Washer</p>
<p>Mx4</p>  <p>Ø6xØ18 Flat Washer</p>	<p>Nx12</p>  <p>M6 Spring Washer</p>	<p>Ox1</p>  <p>4# Allen Wrench</p>	<p>Px5</p>  <p>15mm Felt Pad</p>
<p>Extra Hardware</p> 			

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


Note: Do NOT use power tools for assembly.

ASSEMBLY INSTRUCTIONS


- 1 Connect the Handhold (C) and the Real Leg (D) as indicated below, using Bolts (I), Flat Washers (L), and the Allen Wrench (O). Do not fully tighten yet.

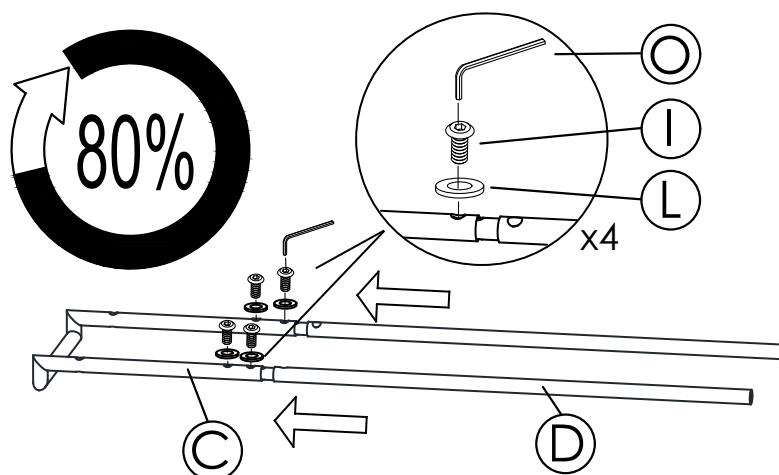


- 2 Attach the Foot Rest (H) to the Front Leg (E) with some pressure, using Bolts (K) and the Allen Wrench (O). Do not fully tighten yet.

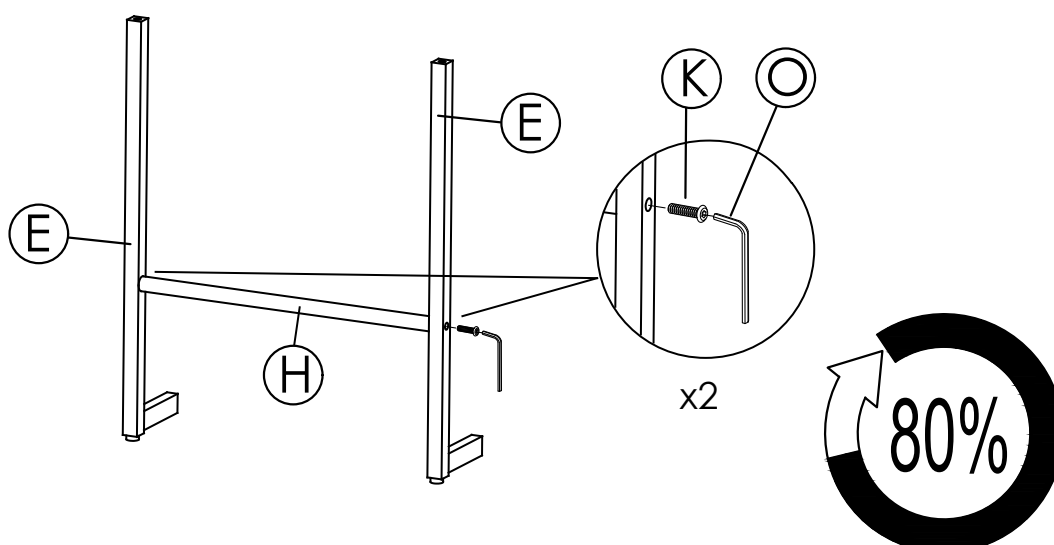


- 3** Insert the Front leg (E) from Step 2 into the Round Base (F), using Bolts (I), Spring Washers (N), and the Allen Wrench (O). Do not fully tighten yet.

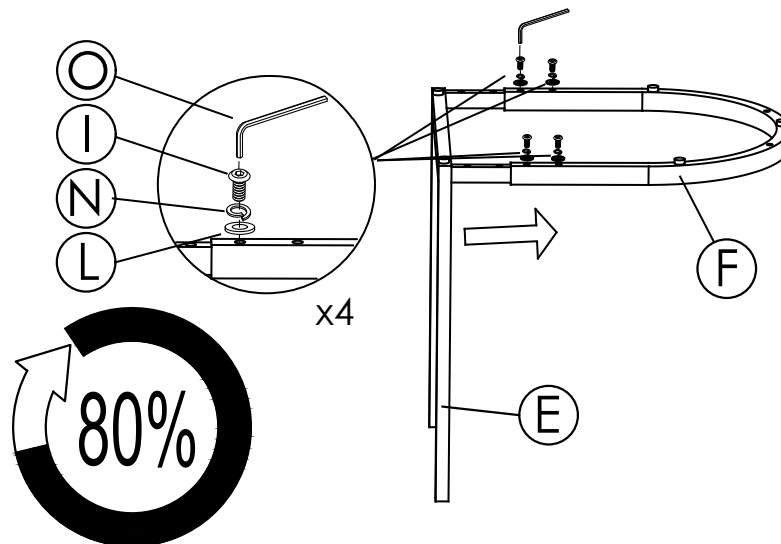


- 4** Insert the Front Leg (E) from Step 3 into the Seat Frame (G), using Bolts (J), Flat Washers (L), and the Allen Wrench (O). Do not fully tighten yet.

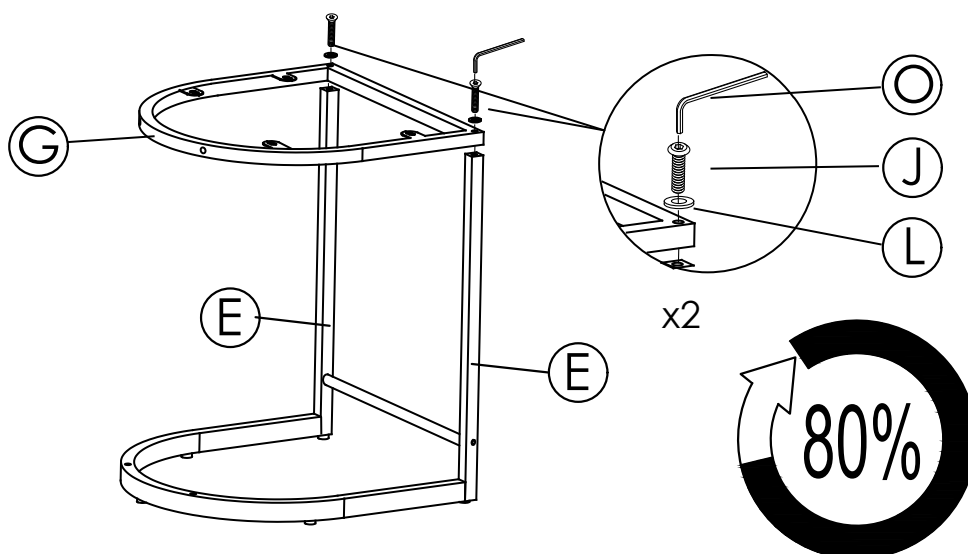


- 5** Connect the assembled frame from Step 1 and Step 4. Use Bolts (J), Spring Washers (N), Flat Washers (L), and the Allen Wrench (O). Do not fully tighten yet.

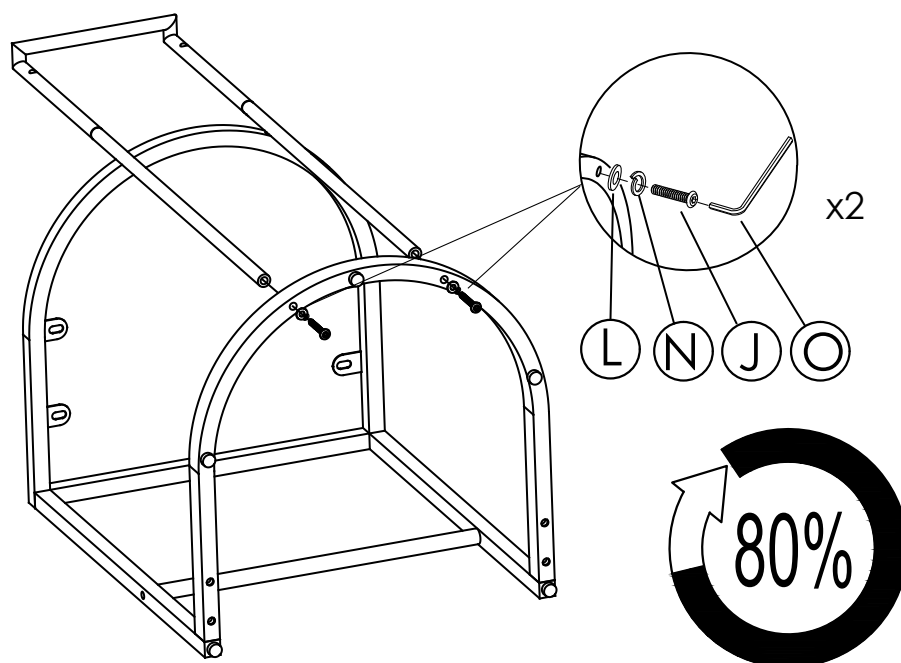


- 6** Place the frame upright. Using Bolts (K), Flat Washers (L), and the Allen Wrench (O), fully tighten.

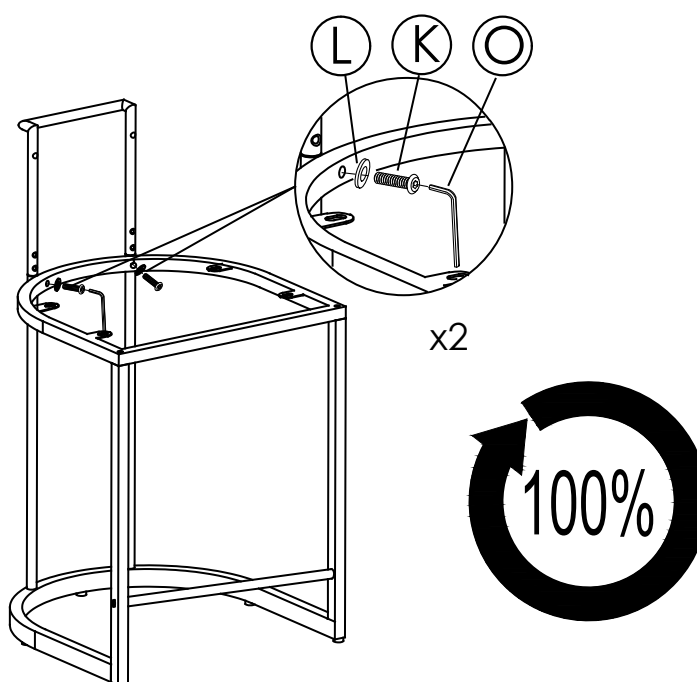


- 7** Use the Allen Wrench (O) to tighten all of bolts as indicated below.

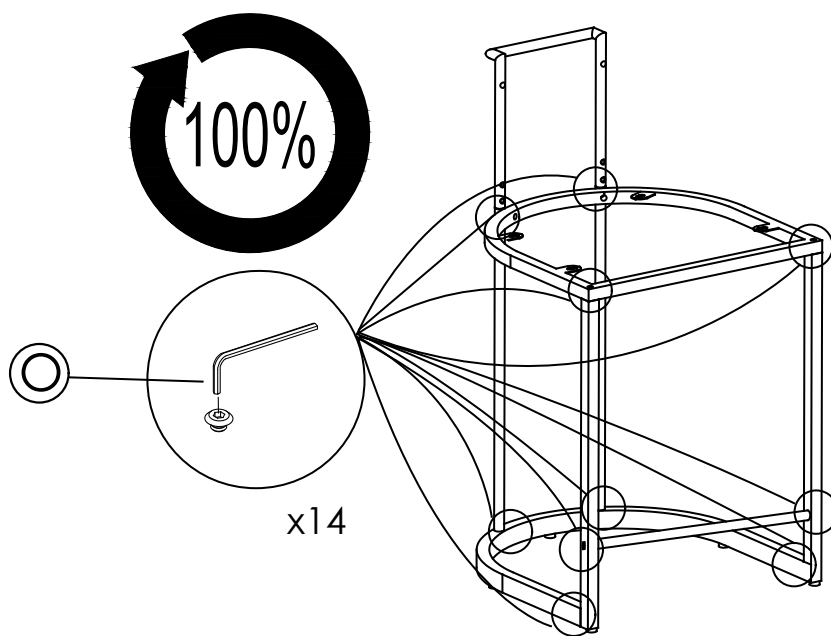


- 8** Attach the Seat Cushion (B) to the frame from Step 7, using Bolts (I), Flat Washers (M), Spring Washers (N), and the Allen Wrench (O), fully tighten.

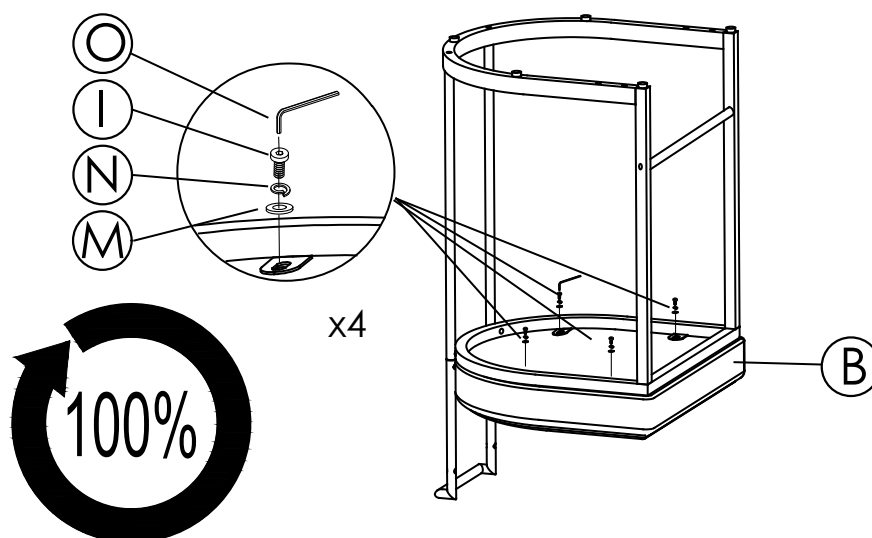


- 9** Attach the Back Cushion (A) to the frame from Step 8, using Bolts (K), Spring Washers (N), and the Allen Wrench (O). Fully tighten.

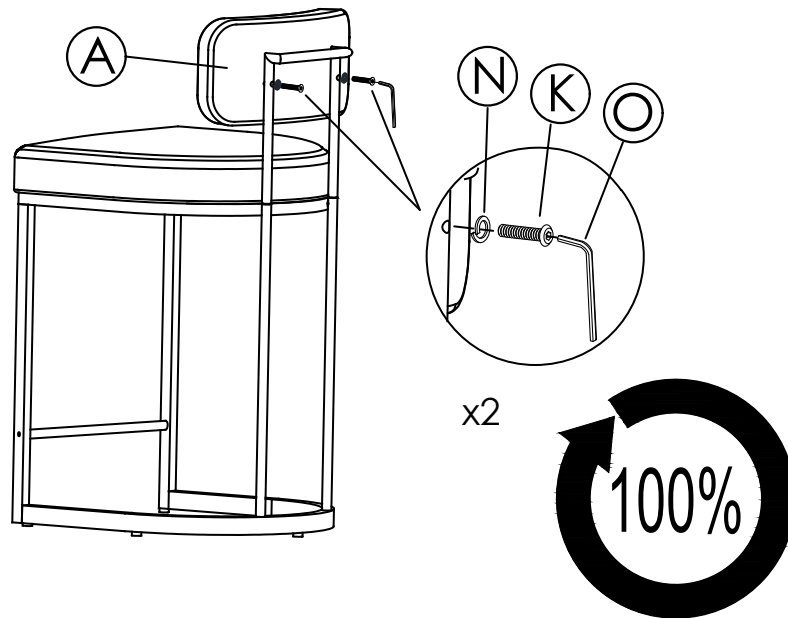


- 10** Complimentary Felt Pads (P) are included to help protect your floor or make the stool slide more easily.

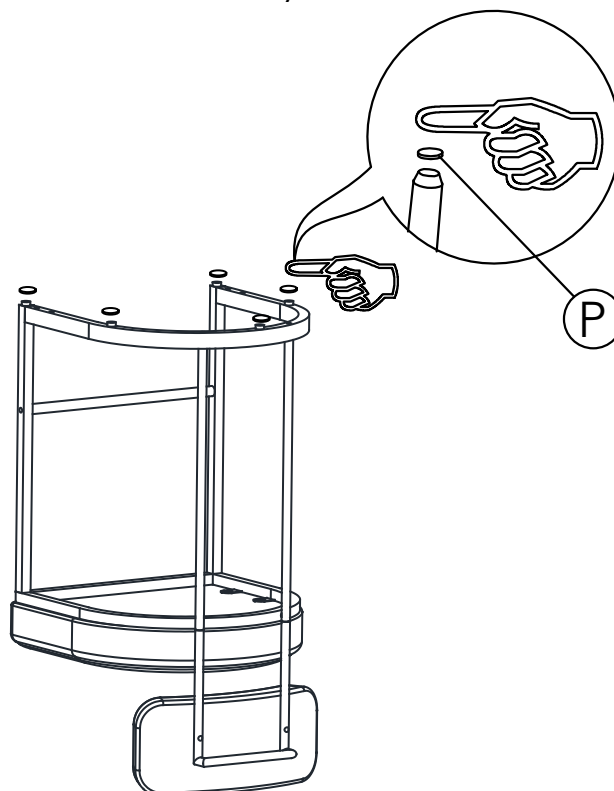

- 11** Turn assembled chair upright and place on a flat surface.
Note: Each leg has an adjustable foot leveler to help level your chair.

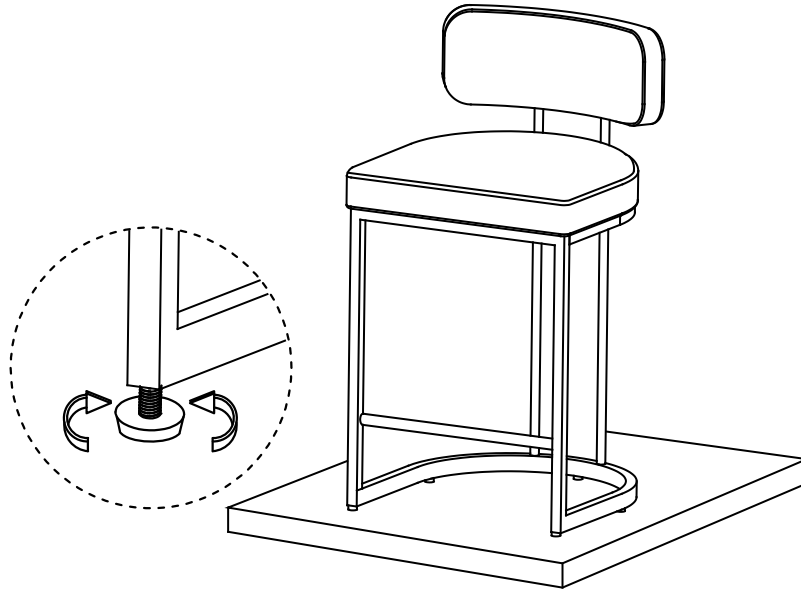

- 12** Assembly complete. Enjoy.

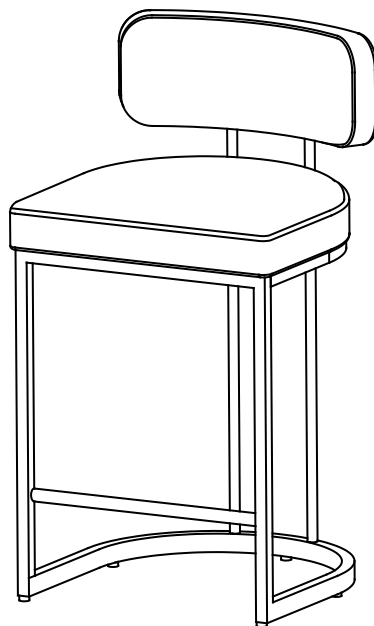

Design Exquisite Furniture For Your Home

PRODUCT WARRANTY

- 1-year limited on cover against splitting, peeling, and/or tearing.
- 1-year limited on internal and external frame structure.
- 1-year limited on cushioning material, seat springs and mechanism.

Contact us:

We make all efforts to guarantee that the products you receive are in excellent condition. If there are any parts missing or damaged, the Customer Service Team will be happy to provide free replacements for you. We have professional warehouses where the current inventory of parts is enough so that they will arrive in your hands as fast as possible.

Assistance with assembly or product details is available; don't hesitate to get in touch with us to get priority service.

Our E-mail address: CS.furniture@outlook.com.



CS.furniture@outlook.com